

Russound User Interfaces

MDK-C6 Multiline Display Keypad


The MDK-C6's buttons and menus allow the user to easily find and control music sources and to make changes to system settings and room audio levels.

Thirteen backlit buttons access power on/off, music, volume up/down, menu shortcuts and zone favorites. The OK button in the center activates a menu choice and the navigation buttons allow you to move through menus and lists. All music sources, audio adjustments and system settings

are arranged in menus and lists. The navigation buttons also act as source controls to select next/previous song, etc., depending upon the type of source.

The keypad's home screen, buttons and navigation buttons are described below.

The main menu options include: Now Playing, Sources, Alarm, Sleep Timer, Do Not Disturb, and Settings. The Settings menu includes the audio, clock, display, and installer options. The audio settings include bass, treble, balance, loudness, and turn on volume.

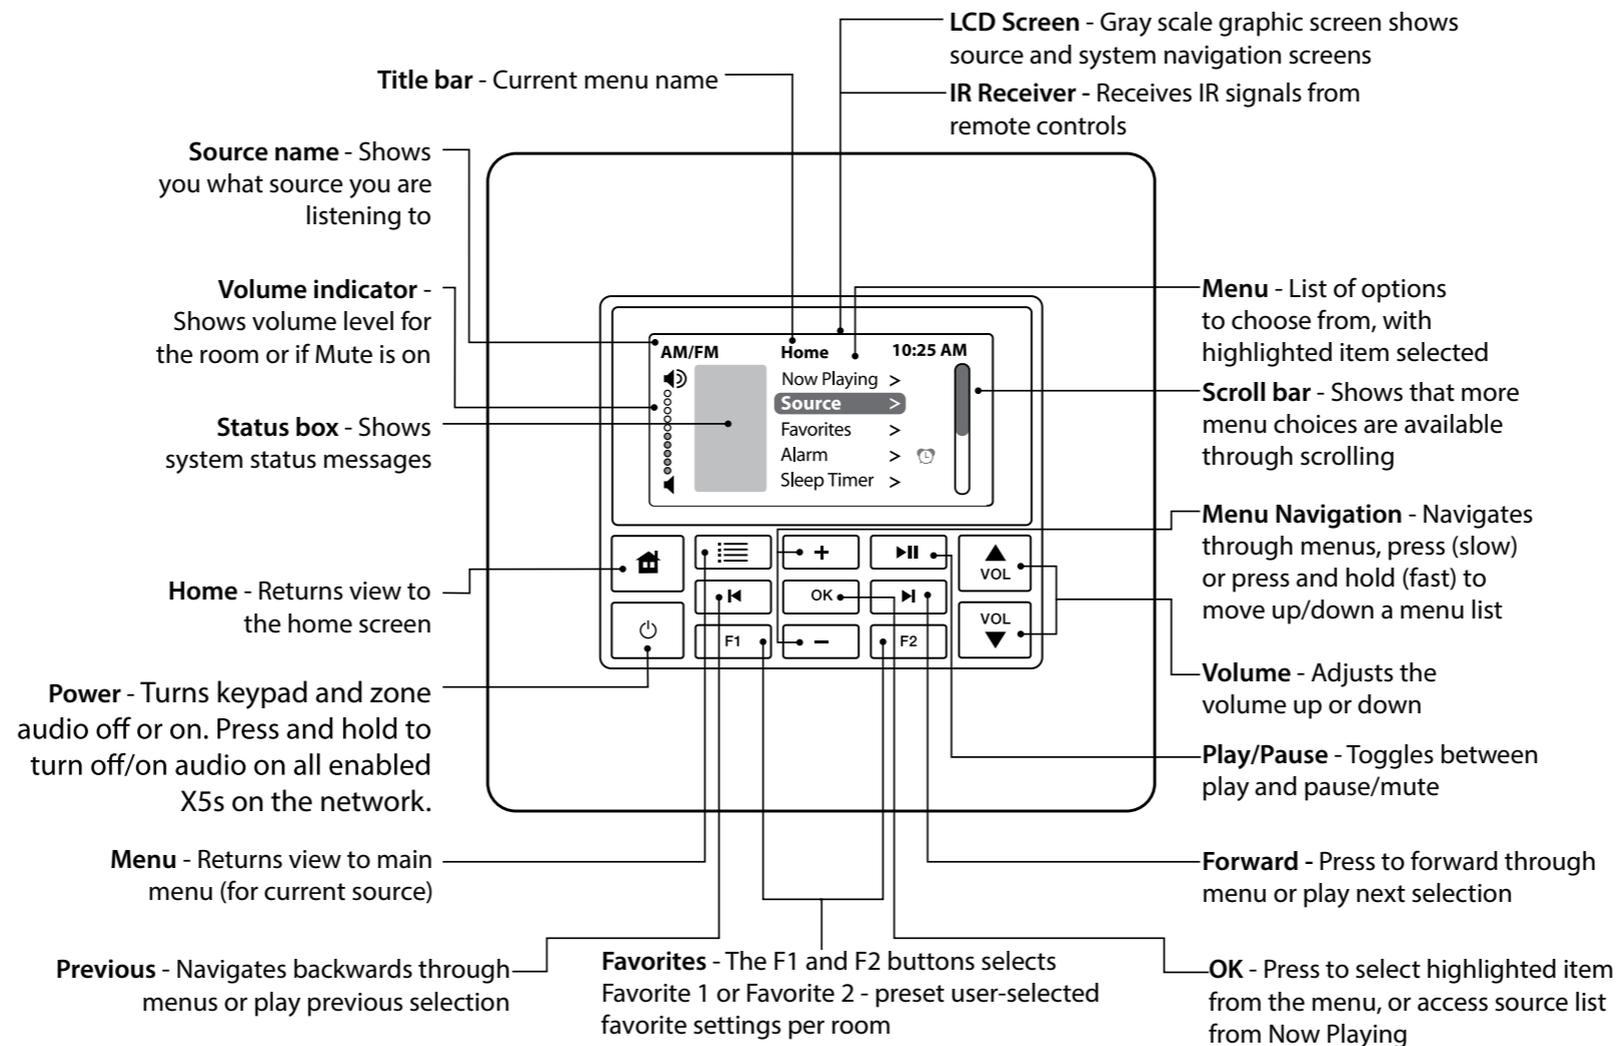

Russound User Interfaces

MDK-C6 Basic Operation

Turn on the zone - Press the power button on the keypad or press power on the USRC remote control to turn on the zone and hear music. The zone will default to the last playing source before being turned off. Press and hold the power button (when ON) to turn on all the keypads.

Turn off the zone - Press the power button on the keypad or press the power button on the USRC remote control to turn off the keypad and music. Press and hold the power button (when OFF) to turn off all other keypads.

Volume adjustments - Press the volume up/down buttons on the side of the keypad, or press the VOL +/- button on the USRC remote control.

Mute Audio - Press the mute button on the USRC.

Home Menu - Sources

From the home screen, select "Sources." A list of available audio sources appears. Select a source, press OK, or press a numbered "Source" button on the USRC remote control.


Once selected, choose music from that source. Each source has its own menu and screens.

Main menus list what is available: channels, genres, playlists, songs, or artists.

Home Menu - Favorites

Favorites - Save a source or a radio station/channel as a favorite.

Add new - Tune to the music source you want to save as a favorite. From the Favorites menu, select "Add New." Name the favorite using the +/- buttons to move through the alphabet and the forward button to move to the next character. Press the OK button to save.

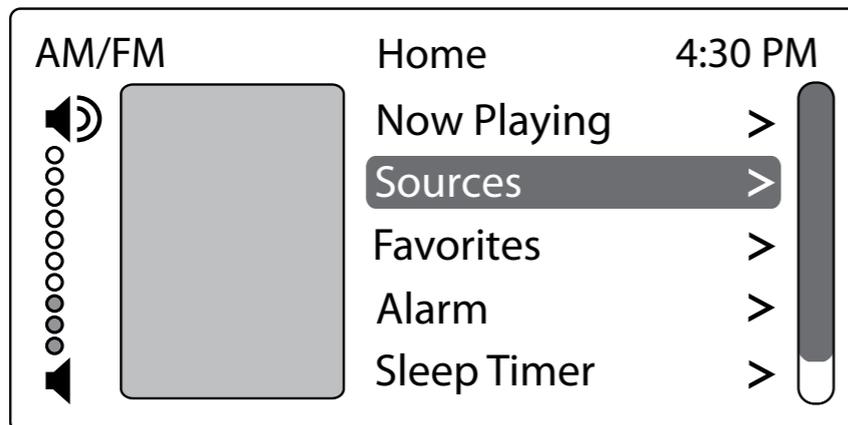

Edit name - Choose the favorite to rename from the favorite menu select edit and use the +/- buttons to scroll through the alphabet and the forward button to move to the next character.

Delete favorite - Choose the favorite to be deleted, from the favorite menu select delete and press the OK button to delete.

F1 and F2 buttons - The MDK-C6 features 2 zone specific presets. These presets can be selected at any time to recall source selection, favorite channel, disc, etc. To store an F1 or F2 favorite preset, select a source to be stored. Press and hold the desired F1 or F2 button until "F1 SAVED" or "F2 SAVED" is displayed on the LCD panel. Now a press and release of the button will recall the favorite preset. To set a favorite numbered disc or channel, use + or - to select a disc or channel (e.g., channel 45). Wait for the keypad to show the source name, then press and hold the F1 or F2 within 15 seconds of setting the numeric selection to save the setting.

Note: *Bluetooth*® will be available as a favorite at later time.

F1 and F2 buttons on MDK-C6 correspond with F1 and F2 buttons on the USRC Remote Control.

Home Menu - Alarm

Set the keypad as an alarm clock and wake up to music. From the home screen menu, scroll to and select "Alarm" for the following options:

Alarm on/off - Activates alarm on or off. If an alarm is set a clock icon will appear on the keypad display.

Wake time - Set the time for the alarm to go off.

Wake to - Choose the music source to wake to.

Choose days - Set the alarm to go off on weekdays, all days or just once.

Set snooze - Choose the interval (5 to 30 minutes) before the alarm goes off again.

Alarm level - Set the volume of the alarm.

How to:

Turn off active alarm - Press the power button on the keypad or USRC remote control.

Snooze - Press the pause button on the keypad or USRC remote control.

Russound User Interfaces

Home Menu - Sleep Timer

You can set the timer so the zone turns off in one of the following increments: 15, 30, 45, or 60 minutes.

Home Menu - Settings

Audio - From the home screen, scroll to and select "settings," and choose "audio settings." You'll see items to adjust, such as bass, treble and balance. Each selection has its own screen and shows levels for real-time adjustments.


Clock

Set time - From the clock menu, select "Set Time." Press the +/- buttons to move through numbers. Press the |< or >| buttons to move the cursor and press OK to save.

Set date - From the clock menu, select "Set Date." The date format is month/day/year. Press the +/- buttons to move through numbers. Press the |< or >| buttons to move the cursor, and press OK to save.

Clock format - From the home menu, select "Settings," then "Clock." Choose "Clock Format," and select 12 hour (AM/PM) or 24 hour (1200) format.


Display - Set the contrast and brightness for the keypad display. Use the buttons (as shown) to move the cursor to the desired level.

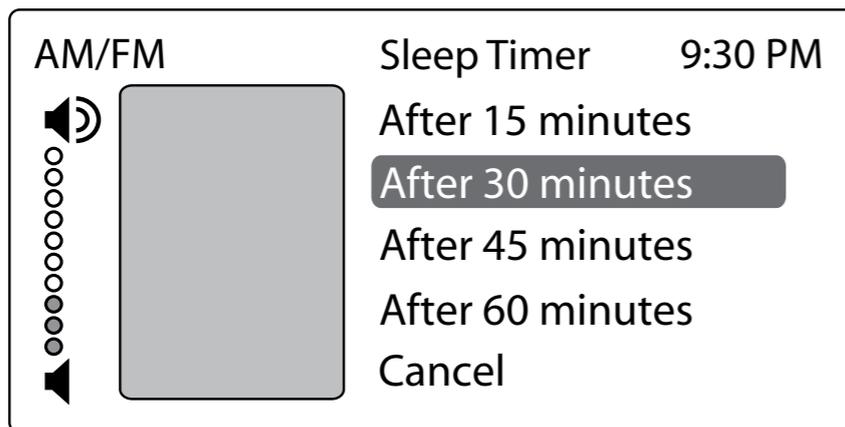

Installer Options

IR enable/disable - The default is Enabled. If an external IR receiver is used, the keypad IR receiver should be disabled. From the main menu, select "Settings," then "Installation," then IR Enable/Disable. Select "disable" and exit back to the menu.

Diagnostics - The MDK-C6 provides firmware version information for Controller 1 and the keypad. Network information such as Controller IP and MAC address are also provided.

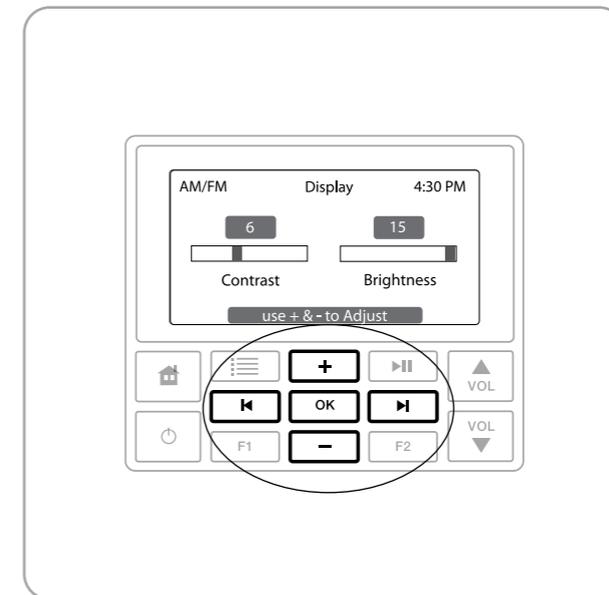

Adjusting display contrast and brightness