

SINAMICS S120 drive system

Supplementary system components

BOP20 Basic Operator Panel

Overview



BOP20 Basic Operator Panel

The BOP20 Basic Operator Panel can be snapped onto any CU310-2 or CU320-2 Control Unit and may be used to acknowledge faults, set parameters and read diagnostic information (e.g. alarm and fault messages).

Design

The BOP20 Basic Operator Panel has a backlit two-line display area and 6 keys.

The integrated plug connector on the back of the BOP20 Basic Operator Panel provides the power to the BOP20 Basic Operator Panel and the communication with the CU310-2 or CU320-2 Control Unit.

Integration



CU310-2 Control Unit with attached BOP20 Basic Operator Panel



CU320-2 Control Unit with attached BOP20 Basic Operator Panel

Selection and ordering data

Description	Order No.
BOP20 Basic Operator Panel	6SL3055-0AA00-4BA0