

Operator Control and Monitoring Devices

Mobile Panels

SIMATIC Mobile Panel 177

2

Ordering data

Order No.

Configuration

with SIMATIC WinCC flexible See Chapter 4

Documentation (to be ordered separately)

Operating Instructions for Mobile Panel 177

- German 6AV6 691-1DK01-0AA0
- English 6AV6 691-1DK01-0AB0
- French 6AV6 691-1DK01-0AC0
- Italian 6AV6 691-1DK01-0AD0
- Spanish 6AV6 691-1DK01-0AE0

User Manual WinCC flexible Compact/Standard/Advanced

- German 6AV6 691-1AB01-2AA0
- English 6AV6 691-1AB01-2AB0
- French 6AV6 691-1AB01-2AC0
- Italian 6AV6 691-1AB01-2AD0
- Spanish 6AV6 691-1AB01-2AE0

User Manual WinCC flexible Communication

- German 6AV6 691-1CA01-2AA0
- English 6AV6 691-1CA01-2AB0
- French 6AV6 691-1CA01-2AC0
- Italian 6AV6 691-1CA01-2AD0
- Spanish 6AV6 691-1CA01-2AE0

SIMATIC HMI Manual Collection B

Electronic documentation, on DVD
5 languages (English, French, German, Italian and Spanish); contains: all currently available user manuals, manuals and communication manuals for SIMATIC HMI

6AV6 691-1SA01-0AX0

A) Subject to export regulations: AL: N and ECCN: EAR99H
B) Subject to export regulations: AL: N and ECCN: EAR99S

Order No.

System components for Mobile Panels

DP junction box for Mobile Panels (MPI/PROFIBUS)

- Basic A 6AV6 671-5AE00-0AX0
- Plus A 6AV6 671-5AE10-0AX0

PN junction box for Mobile Panel (PROFINET)

- Basic A 6AV6 671-5AE01-0AX0
- Plus A 6AV6 671-5AE11-0AX0

DP connecting cable (MPI/PROFIBUS)

Standard cables

- 2 m 6XV1 440-4AH20
- 5 m 6XV1 440-4AH50
- 10 m 6XV1 440-4AN10
- 15 m 6XV1 440-4AN15
- 25 m 6XV1 440-4AN25

Intermediate lengths ¹⁾

- 8 m 6XV1 440-4AH80
- 20 m 6XV1 440-4AN20

PN connecting cable (PROFINET)

Standard cables

- 2 m 6XV1 440-4BH20
- 5 m 6XV1 440-4BH50
- 8 m 6XV1 440-4BH80
- 10 m 6XV1 440-4BN10
- 15 m 6XV1 440-4BN15
- 20 m 6XV1 440-4BN20
- 25 m 6XV1 440-4BN25

Accessories

Accessories for Mobile Panels

See HMI accessories, from page 2/148

1) Delivery period approx. 6 weeks