



# TEST & MEASUREMENT

## SureTrace™ Circuit Tracers

- Receiver display rotates automatically for easy viewing
- Identifies breakers and fuses with CertainCircuit™ detection
- Pinpoints opens and shorts
- Traces wires
- “0-99” display of signal strength
- Audible intensifies in tone/pitch
- Works on energized or de-energized circuits (0 - 600V AC/DC)
- Four modes of sensitivity
- Peak bar graph
- 2-year warranty



61-955

61-957

61-959



### ⚡ CertainCircuit™

After you identify and trip the correct breaker, the transmitter senses the loss of power and sends a different signal back to the receiver to give you confidence at the panel that the right circuit was de-energized.



Energized



De-energized




Scan Code or visit [www.idealindustries.com](http://www.idealindustries.com) to learn more.

### CR-959

Cradle for receiver can be used with extension pole for ceilings and flooring.

Transmitter will work on a de-energized circuit and won't affect GFCIs

D-8

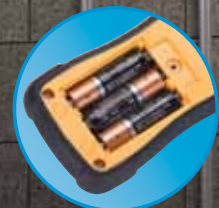

AA batteries provide the transmitter and receiver 4x the power.

**RC-959 Receiver**

**RC-955 Receiver**

**TR-955 Transmitter**



**Inductive Clamp & Battery Pack**



Description	Cat. No.
Receiver with Rotating Display, Inductive Clamp and Battery Pack	<b>61-959</b>
Receiver with Rotating Display	<b>61-957</b>
Receiver with Standard Display	<b>61-955</b>

**Accessories**

Includes	
Fuse – High-Energy, Fast-acting, 1A/1000V	<b>F-956</b>
Magnetic Strap	<b>61-565</b>
Tracer Test Lead Set (includes 1-6 below)	<b>TL-956</b>
1. Outlet Plug Adapter for Transmitter	<b>TLOP-956</b>
2. Blade Prongs for Lead Adapters (set of 2)	<b>TLBP-956</b>
3. Ground Prong for Lead Adapters (set of 2)	<b>TLGP-956</b>
4. Alligator Clips for Lead Adapters (set of 2)	<b>TLAC-956</b>
5. 3 ft. Lead Adapters for Transmitter (set of 2)	<b>TLA1-956</b>
6. 25 ft. Lead Adapter for Transmitter	<b>TLA2-956</b>
Optional	
Cradle for Receiver*	<b>CR-959</b>

\*Threaded for use on standard extension pole.



**Exclusive Rotating Display**

Revolutionary technology in the receiver rotates the display in 90° increments so that you always receive an upright reading. Even when the receiver is pointing down, you can keep up.



Kit Contents	61-955	61-957	61-959
Transmitter	TR-955	TR-955	TR-955
Receiver	RC-955	RC-959	RC-959
Tracer Test Lead Set	TL-956	TL-956	TL-956
Inductive Clamp			IC-958
Battery Pack & 61-565 Strap			BP-958
Hard Carrying Case	C-955	C-957	C-959
Batteries	■	■	■
Instruction Manual	■	■	■