








 
## Motor Starter Protectors/Circuit Breakers

### SIRIUS 3RV1 Motor Starter Protectors/Circuit Breakers up to 100 A





 
#### Accessories

#### Mountable accessories

#### Selection and ordering data

Version	Contacts	For motor starter protectors/circuit breakers	DT	Screw terminals 	PU (UNIT, SET, M)	PS*	PG	
Size				Article No.	Price per PU			
<b>Auxiliary switches<sup>1)</sup></b>								
 3RV1901-1E	<b>Transverse auxiliary switches</b> With screw terminals, mountable on front	1 CO 1 NO + 1 NC 2 NO	S00, S0, S2, S3	▶ ▶ ▶	<b>3RV1901-1D</b> <b>3RV1901-1E</b> <b>3RV1901-1F</b>	1 1 1	1 unit 1 unit 1 unit	41E 41E 41E
 3RV1901-1G	<b>Electronic compatible transverse auxiliary switches</b> With screw terminals, front mountable, for operation in dusty atmosphere and in electronic circuits with low operating currents	1 CO	S00, S0, S2, S3	A	<b>3RV1901-1G</b>	1	1 unit	41E
 3RV1901-0H	<b>Covers for transverse auxiliary switches</b>	--	S00, S0, S2, S3	▶	<b>3RV1901-0H</b>	1	10 units	41E
 3RV1901-1A	<b>Lateral auxiliary switches</b> With screw terminals, mountable on the left	1 NO + 1 NC	S00, S0, S2, S3	▶	<b>3RV1901-1A</b>	1	1 unit	41E
 3RV1901-1B		2 NO		▶	<b>3RV1901-1B</b>	1	1 unit	41E
 3RV1901-1C		2 NC		▶	<b>3RV1901-1C</b>	1	1 unit	41E
 3RV1901-1J		2 NO + 2 NC		A	<b>3RV1901-1J</b>	1	1 unit	41E

<sup>1)</sup> Each motor starter protector/circuit breaker can be fitted with one transverse and one lateral auxiliary switch. The lateral auxiliary switch with 2 NO + 2 NC is used without a transverse auxiliary switch. Transverse auxiliary switches must not be used for the 3RV1742 circuit breakers.

Version	Contacts	For motor starter protectors/circuit breakers	DT	Spring-type terminals 	PU (UNIT, SET, M)	PS*	PG	
Size				Article No.	Price per PU			
<b>Auxiliary switches<sup>1)</sup></b>								
 3RV1901-2E	<b>Transverse auxiliary switches</b> With spring-type terminals, mountable on the front	1 NO + 1 NC 2 NO	S00, S0, S2, S3	▶ ▶	<b>3RV1901-2E</b> <b>3RV1901-2F</b>	1 1	1 unit 1 unit	41E 41E
 3RV1901-2A	<b>Lateral auxiliary switches</b> With spring-type terminals, mountable on the left	1 NO + 1 NC	S00, S0, S2, S3	▶	<b>3RV1901-2A</b>	1	1 unit	41E
 3RV1901-2B		2 NO		▶	<b>3RV1901-2B</b>	1	1 unit	41E
 3RV1901-2C		2 NC		▶	<b>3RV1901-2C</b>	1	1 unit	41E

<sup>1)</sup> Each motor starter protector/circuit breaker can be fitted with one transverse and one lateral auxiliary switch. Transverse auxiliary switches must not be used for the 3RV1742 circuit breakers.