

### Product Selection

#### When Ordering Specify

- Catalog number of manual motor starter
- Heater pack selection
- Any required accessories
- Heater coil selection according to the motor full load current requirements

#### MS Series Starters

 
##### MS Series, Single-Phase Starters



#### Open Type

Number of Poles	Horsepower	Voltage	Catalog Number <sup>①</sup>
1	1	120/240V, 277 Vac	<b>MST01</b>
	1/4	120/240 Vdc	<b>MST01</b>
	1/4	32 Vdc	<b>MST01</b>
2	1	120/240V, 277 Vac	<b>MST02</b>
	1	120/240 Vdc	<b>MST02</b>
	1/4	32 Vdc	<b>MST02</b>

##### Switch and Pilot Light Mounted on Flush Plate



#### Flush Plate (No Enclosure Included)

Number of Poles	Flush Plate Type	Voltage	Catalog Number <sup>①</sup>
1	General purpose	Switch only	<b>MST01FN</b>
2		Switch with pilot light	<b>MST02FN1P</b>
1	Stainless steel	Switch only	<b>MST01DN</b>
		Switch with pilot light	<b>MST01DN1P</b>
2		Switch only	<b>MST02DN</b>
		Switch with pilot light	<b>MST02DN1P</b>

#### Note

<sup>①</sup> Does not include heater. Select heater from tables on [Page V5-T3-8](#).