



# Pushbutton Units and Indicator Lights

## 30 mm Heavy Duty, Watertight/Oiltight, Class 52

### Class 52 oiltight pushbutton stations

#### Selection and ordering data


	Actuator identification	Degree of protection	Contact / voltage	No. of command points	Order no.	Weight Pack approx.	
						kg	Unit
1 unit control station 	A = Momentary flush pushbutton black, label "START"	NEMA 12	1NO - 1NC	1	<b>52C101A</b>		
	A = Momentary raised pushbutton red, label "STOP"	NEMA 12	1NO - 1NC	1	<b>52C103A</b>		
	A = Momentary mushroom head red, label "STOP"	NEMA 12	1NO - 1NC	1	<b>52C104A</b>		
	A = Maintained plastic mushroom head red, label "EMERGENCY STOP"	NEMA 12	1NO - 1NC	1	<b>52C117A</b>		
	A = 2 position selector switch "OFF-ON"	NEMA 12	1NO - 1NC	1	<b>52C159A</b>		
	A = 3 position selector switch "HAND-OFF-AUTO"	NEMA 12	1NO - 1NC	1	<b>52C156A</b>		
	A = Indicator light, red	NEMA 12	120V Transformer type	1	<b>52C131A</b>		
	A = Indicator light, green	NEMA 12	120V Transformer type	1	<b>52C135A</b>		
	A = Momentary flush pushbutton black, label "START"	NEMA 4X Stainless Steel	1NO - 1NC	1	<b>52C101S</b>		
	A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO - 1NC	1	<b>52C103S</b>		
	A = Momentary mushroom head red, label "STOP"	NEMA 4X Stainless Steel	1NO - 1NC	1	<b>52C104S</b>		
	A = Maintained mushroom head red, label "EMERGENCY STOP"	NEMA 4X Stainless Steel	1NO - 1NC	1	<b>52C116S</b>		
	A = 2 position selector switch "OFF-ON"	NEMA 4X Stainless Steel	1NO - 1NC	1	<b>52C159S</b>		
	A = 3 position selector switch "HAND-OFF-AUTO"	NEMA 4X Stainless Steel	1NO - 1NC	1	<b>52C156S</b>		
	A = Momentary flush pushbutton black, label "START"	NEMA 4X Fiberglass	1NO - 1NC	1	<b>52C101X</b>		
	A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO - 1NC	1	<b>52C103X</b>		
	A = Momentary mushroom head red, label "STOP"	NEMA 4X Fiberglass	1NO - 1NC	1	<b>52C104X</b>		
	A = Maintained mushroom head red, label "EMERGENCY STOP"	NEMA 4X Fiberglass	1NO - 1NC	1	<b>52C116X</b>		
	A = 2 position selector switch "OFF-ON"	NEMA 4X Fiberglass	1NO - 1NC	1	<b>52C159X</b>		
A = 3 position selector switch "HAND-OFF-AUTO"	NEMA 4X Fiberglass	1NO - 1NC	1	<b>52C156X</b>			
2 unit control station 	B = Momentary flush pushbutton black, label "START"	NEMA 12	1NO, 1NC	2	<b>52C201A</b>		
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC				
	B = Momentary flush pushbutton green, label "START"	NEMA 12	1NO, 1NC	2	<b>52C202A</b>		
	A = Momentary Mushroom head pushbutton red, label "STOP"		1NO, 1NC				
	B = Momentary flush pushbutton, label "FORWARD"	NEMA 12	1NO, 1NC	2	<b>52C204A</b>		
	A = Momentary flush pushbutton, label "REVERSE"		1NO, 1NC				
	B = Momentary flush pushbutton, label "UP"	NEMA 12	1NO, 1NC	2	<b>52C223A</b>		
	A = Momentary flush pushbutton, label "DOWN"		1NO, 1NC				
	B = Indicator light, red, label "RUN"	NEMA 12	120V Transformer type	2	<b>52C224A</b>		
	A = Maintained selector switch, label "HAND-OFF-AUTO"						
	B = Indicator light, red	NEMA 12	120V Transformer type	2	<b>52C230A</b>		
	A = Indicator light, green						
	B = Momentary flush pushbutton black, label "START"	NEMA 4X Stainless Steel	1NO, 1NC	2	<b>52C201S</b>		
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC				
	B = Momentary flush pushbutton green, label "START"	NEMA 4X Stainless Steel	1NO, 1NC	2	<b>52C202S</b>		
	A = Momentary Mushroom head pushbutton red, label "STOP"		1NO, 1NC				
	B = Momentary flush pushbutton, label "UP"	NEMA 4X Stainless Steel	1NO, 1NC	2	<b>52C223S</b>		
	A = Momentary flush pushbutton, label "DOWN"		1NO, 1NC				
	B = Indicator light, red, label "RUN"	NEMA 4X Stainless Steel	120V Transformer type	2	<b>52C224S</b>		
	A = Maintained selector switch, label "HAND-OFF-AUTO"		1NO, 1NC				
	B = Momentary flush pushbutton black, label "START"	NEMA 4X Fiberglass	1NO, 1NC	2	<b>52C201X</b>		
	A = Momentary raised pushbutton red, label "STOP"		1NO, 1NC				
	B = Momentary flush pushbutton green, label "START"	NEMA 4X Fiberglass	1NO, 1NC	2	<b>52C202X</b>		
A = Momentary Mushroom head pushbutton red, label "STOP"		1NO, 1NC					
B = Momentary flush pushbutton, label "UP"	NEMA 4X Fiberglass	1NO, 1NC	2	<b>52C223X</b>			
A = Momentary flush pushbutton, label "DOWN"		1NO, 1NC					
B = Indicator light, red, label "RUN"	NEMA 4X Fiberglass	120V Transformer type	2	<b>52C224X</b>			
A = Maintained selector switch, label "HAND-OFF-AUTO"		1NO, 1NC					

# Pushbutton Units and Indicator Lights

## 30 mm Heavy Duty, Watertight/Oiltight, Class 52

### Class 52 oiltight pushbutton stations

#### Selection and ordering data

Actuator identification	Degree of protection	Contact / voltage	No. of command points	Order no.	Weight approx.	Pack
					kg	Unit
3 unit control station 	C = Indicator light, red	NEMA 12	120V 1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C307A	
	B = Momentary flush pushbutton black, label "START" A = Momentary raised pushbutton red, label "STOP"					
	C = Momentary flush pushbutton black, label "FORWARD" B = Momentary flush pushbutton black, label "REVERSE" A = Momentary raised pushbutton red, label "STOP"	NEMA 12	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C301A	
	C = Momentary flush pushbutton black, label "UP" B = Momentary flush pushbutton black, label "DOWN" A = Momentary raised pushbutton red, label "STOP"	NEMA 12	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C332A	
	C = Momentary flush pushbutton black, label "OPEN" B = Momentary flush pushbutton black, label "STOP" A = Momentary raised pushbutton red, label "CLOSE"	NEMA 12	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C333A	
	C = Momentary flush pushbutton black, label "HI" B = Momentary flush pushbutton, black label "LOW" A = Momentary raised pushbutton red, label "STOP"	NEMA 12	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C334A	
	C = Indicator light, red	NEMA 4X Stainless Steel	120V 1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C307S	
	B = Momentary flush pushbutton black, label "START" A = Momentary raised pushbutton red, label "STOP"					
	C = Momentary flush pushbutton black, label "FORWARD" B = Momentary flush pushbutton black, label "REVERSE" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C301S	
	C = Momentary flush pushbutton black, label "UP" B = Momentary flush pushbutton black, label "DOWN" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C332S	
	C = Momentary flush pushbutton black, label "OPEN" B = Momentary flush pushbutton black, label "STOP" A = Momentary raised pushbutton red, label "CLOSE"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C333S	
	C = Momentary flush pushbutton black, label "HI" B = Momentary flush pushbutton, black label "LOW" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Stainless Steel	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C334S	
	C = Indicator light, red	NEMA 4X Fiberglass	120V 1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C307X	
	B = Momentary flush pushbutton black, label "START" A = Momentary raised pushbutton red, label "STOP"					
	C = Momentary flush pushbutton black, label "FORWARD" B = Momentary flush pushbutton black, label "REVERSE" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C301X	
	C = Momentary flush pushbutton black, label "UP" B = Momentary flush pushbutton black, label "DOWN" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C332X	
	C = Momentary flush pushbutton black, label "OPEN" B = Momentary flush pushbutton black, label "STOP" A = Momentary raised pushbutton red, label "CLOSE"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C333X	
	C = Momentary flush pushbutton black, label "HI" B = Momentary flush pushbutton, black label "LOW" A = Momentary raised pushbutton red, label "STOP"	NEMA 4X Fiberglass	1NO, 1NC 1NO, 1NC 1NO, 1NC	3	52C334X	