For replacement parts information or an application guide, visit our website at www.sea.siemens.com or contact your local Siemens sales office.

Class 52 SFIS-5201A-0108

Pilot Light

January 2008

IMPORTANT

THE INFORMATION CONTAINED HEREIN DOES NOT PURPORT TO COVER ALL DETAILS OR VARIATIONS IN EQUIPMENT, NOR TO PROVIDE FOR EVERY POSSIBLE CONTINGENCY TO BE MET IN CONNECTION WITH INSTALLATION, OPERATION OR MAINTENANCE. SHOULD FURTHER INFORMATION BE DESIRED OR SHOULD PARTICULAR PROBLEMS ARISE WHICH ARE NOT COVERED SUFFICIENTLY FOR THE PURCHASER'S PURPOSES, THE MATTER SHOULD BE REFERRED TO THE LOCAL SIEMENS SALES OFFICE


THE CONTENTS OF THIS INFORMATION SHEET SHALL NOT BECOME PART OF OR MODIFY ANY PRIOR OR EXISTING AGREEMENT, COMMITMENT OR RELATIONSHIP. THE SALES CONTRACT CONTAINS THE ENTIRE OBLIGATION OF SIEMENS. THE WARRANTY CONTAINED IN THE CONTRACT BETWEEN THE PARTIES IS THE SOLE WARRANTY OF SIEMENS. ANY STATEMENTS CONTINUED HEREIN DO NOT CREATE NEW WARRANTIES OR MODIFY THE EXISTING WARRANTY.



WARNING

Hazardous voltage. Can cause death, serious personal injury, or property damage.

To avoid electrical shock, turn off electrical power to controls before performing installation or maintenance.

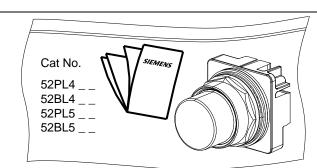


Notes for BlackMax 4X devices:

- •The trim ring is not needed or supplied.
- * Use the locknut wrench 52MAWB


1

2

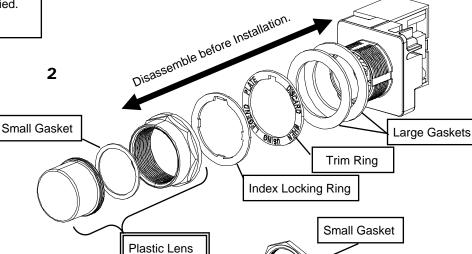


Mounting Hole Pattern 3


Typical Spacing shown. Automotive Legend plate requires 2.5" spacing. Some Accessories also require additional spacing.

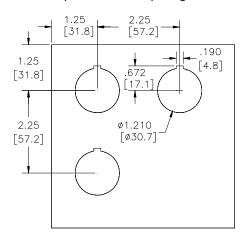


Option: Legend Plate

 Glass Lens



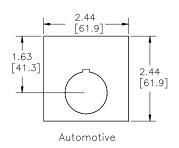

1

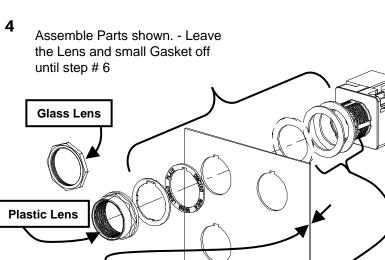

Panel Thickness Number of Large Gaskets Required


.062 - .072 2 Large Gaskets Supplied + 2 Additional Gaskets

.072 - .125 2 Large Gaskets Supplied + 1 Additional Gasket

.126 - .187 2 Large Gaskets Supplied


Kit containing 2 Additional Large Gaskets - Cat# 52ABD

Light Module Installation: Torque Light Module retaining screws to 8-10 lb.in. [0.9 – 1.1 Nm]

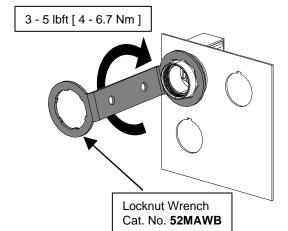


6a Plastic Lens

- 1. Place Small Gasket inside nut.
- 2. Insert Lens into switch body.
- 3. Tighten securely by hand.

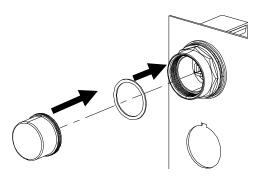

7a

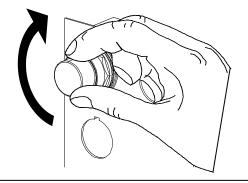


6b

Glass Lens

- 1. Install Small Gasket and Lens in order shown.
- 2. Install Lens Nut.

5

3. Tighten securely by hand.

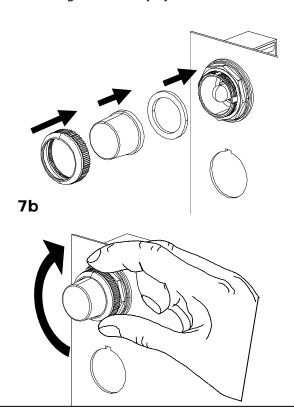

Replacement Bulb Chart

		LED Lamp - Single Bulb				
Volts	Incandescent Bulb	Red	Green	Yellow	White	Blue
6	# 755 *	52AEB2	52AEB3	52AEB4	52AEBB	52AEB5
24	# 757	52AED2	52AED3	52AED4	52AEDB	52AED5
120	# 120 MB	52AEE2	52AEE3	52AEE4	52AEEB	52AEE5

* Also Flashing Lamp #267

Γ		LED Lamp - Bulb Cluster				
L	Volts	Red	Green	Yellow		
I	6	52AEB27	52AEB37	52AEB47		
Γ	24	52AED27	52AED37	52AED47		
E	120	52AEE27	52AEE37	52AEE47		