

Panelboards

Warehouse Stock/Unassembled – Type P1 Panelboards

Selection

 11
 PANELBOARDS


Main Breaker Mounting Kits with Breakers for P1 Panels (250A and lower can be used as subfeed kits also)

| Frame size Reference | Revised P1 Catalog No. | Description | Max IR (kA) at | | |
|-------------------------------|------------------------|----------------------------------|----------------|------|------|
| | | | 240V | 480V | 600V |
| ED 3-ph 125A Max. | MBKED3100A | Kit w/3-pole ED4 100A breaker | 65 | 18 | — |
| | MBKED3125A | Kit w/3-pole ED4 125A breaker | 65 | 18 | — |
| QR 1-ph 225A Max. | MBKQR1125A | Kit w/2-pole QR2 125A breaker | 10 | — | — |
| | MBKQR1150A | Kit w/2-pole QR2 150A breaker | 10 | — | — |
| | MBKQR1175A | Kit w/2-pole QR2 175A breaker | 10 | — | — |
| | MBKQR1200A | Kit w/2-pole QR2 200A breaker | 10 | — | — |
| | MBKQR1225A | Kit w/2-pole QR2 225A breaker | 10 | — | — |
| HQR 1-ph 225A Max. | MBKQR1125H | A Kit w/2-pole HQR2 125A breaker | 65 | — | — |
| | MBKQR1150H | A Kit w/2-pole HQR2 150A breaker | 65 | — | — |
| | MBKQR1175H | A Kit w/2-pole HQR2 175A breaker | 65 | — | — |
| | MBKQR1200H | A Kit w/2-pole HQR2 200A breaker | 65 | — | — |
| QR2 3-ph 225A Max. | MBKQR3125A | Kit w/3-pole QR2 125A breaker | 10 | — | — |
| | MBKQR3150A | Kit w/3-pole QR2 150A breaker | 10 | — | — |
| | MBKQR3175A | Kit w/3-pole QR2 175A breaker | 10 | — | — |
| | MBKQR3200A | Kit w/3-pole QR2 200A breaker | 10 | — | — |
| | MBKQR3225A | Kit w/3-pole QR2 225A breaker | 10 | — | — |
| HQR2 3-ph 225A Max. | MBKQR3125H | A Kit w/3-pole HQR2 125A breaker | 65 | — | — |
| | MBKQR3150H | A Kit w/3-pole HQR2 150A breaker | 65 | — | — |
| | MBKQR3175H | A Kit w/3-pole HQR2 175A breaker | 65 | — | — |
| | MBKQR3200H | A Kit w/3-pole HQR2 200A breaker | 65 | — | — |
| | MBKQR3225H | A Kit w/3-pole HQR2 225A breaker | 65 | — | — |
| 3VA52 3-ph 250A Max. | MBKVAM3150A | RP1 150A MB kit, 35kA 3ph 3VA52 | 85 | 35 | 18 |
| | MBKVAM3200A | RP1 200A MB kit, 35kA 3ph 3VA52 | 85 | 35 | 18 |
| | MBKVAM3225A | RP1 225A MB kit, 35kA 3ph 3VA52 | 85 | 35 | 18 |
| | MBKVAM3250A | RP1 250A MB kit, 35kA 3ph 3VA52 | 85 | 35 | 18 |
| | MBKVAH3200A | RP1 200A MB kit, 65kA 3ph 3VA52 | 100 | 65 | 25 |
| | MBKVAH3250A | RP1 250A MB kit, 65kA 3ph 3VA52 | 100 | 65 | 25 |
| FD 3-ph 250A Max. | MBKFD3150A | Kit w/3-pole FXD6 150A breaker | 65 | 35 | 22 |
| | MBKFD3175A | Kit w/3-pole FXD6 175A breaker | 65 | 35 | 22 |
| | MBKFD3200A | Kit w/3-pole FXD6 200A breaker | 65 | 35 | 22 |
| | MBKFD3225A | Kit w/3-pole FXD6 225A breaker | 65 | 35 | 22 |
| | MBKFD3250A | Kit w/3-pole FXD6 250A breaker | 65 | 35 | 22 |
| 3VA53 3-ph 400A Max. | MBKVAM1300A | RP1 300A MB kit, 35kA 1ph 3VA53 | 85 | 35 | 18 |
| | MBKVAM1400A | RP1 400A MB kit, 35kA 1ph 3VA53 | 85 | 35 | 18 |
| | MBKVAM3300A | RP1 300A MB kit, 35kA 3ph 3VA53 | 85 | 35 | 18 |
| | MBKVAM3400A | RP1 400A MB kit, 35kA 3ph 3VA53 | 85 | 35 | 18 |
| | MBKVAH3300A | RP1 300A MB kit, 65kA 3ph 3VA53 | 100 | 65 | 25 |
| | MBKVAH3400A | RP1 400A MB kit, 65kA 3ph 3VA53 | 100 | 65 | 25 |
| JD 1-ph 400A Max. | MBKJD1300A | Kit w/2-pole JXD6 300A breaker | 65 | 35 | — |
| | MBKJD1400A | Kit w/2-pole JXD6 400A breaker | 65 | 35 | — |
| | MBKJD12300A | Kit w/2-pole JXD2 300A breaker | 65 | — | — |
| | MBKJD12400A | Kit w/2-pole JXD2 400A breaker | 65 | — | — |
| JD 3-ph 400A Max. | MBKJD3300A | Kit w/3-pole JXD6 300A breaker | 65 | 35 | — |
| | MBKJD3400A | Kit w/3-pole JXD6 400A breaker | 65 | 35 | — |
| | MBKJD32300A | Kit w/3-pole JXD2 300A breaker | 65 | — | — |
| | MBKJD32400A | Kit w/3-pole JXD2 400A breaker | 65 | — | — |

Branch Breakers Selection for P1

Selection Guide

1. Select breaker type.
2. Select required amperage.
3. Select number of poles.
4. Select branch breaker catalog numbers.
5. Select ground bar and filler plates. (See replacement parts & accessories on Page 11-13.)

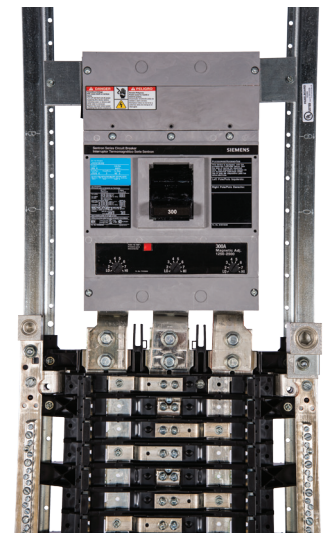

300A Main installed.
These Revised P1 kits can now be used as top or bottom feed.