# **Accessories and Cables**

# **■**Connection Cables (Power Cables, Brake Cables, Encoder Cables)

### <Non-flexible Cables>

Power cable

Specifications		Without brake	With brake
		Model	Model
[100 V/200 V]	3 m	R88A-CAKA003S	
	5 m	R88A-CAKA005S	
	10 m	R88A-CAKA010S	
	15m	R88A-CAKA015S	
3,000-r/min Servomotors of 50 to 750 W	20 m	R88A-CAKA020S	
	30 m	R88A-CAKA030S	
	40 m	R88A-CAKA040S	
	50 m	R88A-CAKA050S	
	3 m	R88A-CAGB003S	R88A-CAGB003B
	5 m	R88A-CAGB005S	R88A-CAGB005B
[200 V]	10 m	R88A-CAGB010S	R88A-CAGB010B
3,000-r/min Servomotors of 1 to 2 kW	15 m	R88A-CAGB015S	R88A-CAGB015B
2,000-r/min Servomotors of 1 to 2 kW 1,000-r/min Servomotors of 900 W	20 m	R88A-CAGB020S	R88A-CAGB020B
1,000-1/IIIII Servoinotors of 300 W	30 m	R88A-CAGB030S	R88A-CAGB030B
	40 m	R88A-CAGB040S	R88A-CAGB040B
	50 m	R88A-CAGB050S	R88A-CAGB050B
	3 m	R88A-CAGB003S	R88A-CAKF003B
	5 m	R88A-CAGB005S	R88A-CAKF005B
[400 V]	10 m	R88A-CAGB010S	R88A-CAKF010B
3,000-r/min Servomotors of 750 W to 2 kW	15 m	R88A-CAGB015S	R88A-CAKF015B
2,000-r/min Servomotors of 400 W to 2 kW 1,000-r/min Servomotors of 900 W	20 m	R88A-CAGB020S	R88A-CAKF020B
1,000-1/IIIII Servoinotors of 900 W	30 m	R88A-CAGB030S	R88A-CAKF030B
	40 m	R88A-CAGB040S	R88A-CAKF040B
	50 m	R88A-CAGB050S	R88A-CAKF050B
	3 m	R88A-CAGD003S	R88A-CAGD003B
	5 m	R88A-CAGD005S	R88A-CAGD005B
[200 V] [400 V]	10 m	R88A-CAGD010S	R88A-CAGD010B
3,000-r/min Servomotors of 3 to 5 kW	15 m	R88A-CAGD015S	R88A-CAGD015B
2,000-r/min Servomotors of 3 to 5 kW 1,000-r/min Servomotors of 2 to 4.5 kW	20 m	R88A-CAGD020S	R88A-CAGD020B
1,000-1/IIIII Servoinotors of 2 to 4.5 kW	30 m	R88A-CAGD030S	R88A-CAGD030B
	40 m	R88A-CAGD040S	R88A-CAGD040B
	50 m	R88A-CAGD050S	R88A-CAGD050B
[200 V] [400 V] 1,500-r/min Servomotors of 7.5 kW 1,000-r/min Servomotors of 6 kW	3 m	R88A-CAGE003S	
	5 m	R88A-CAGE005S	
	10 m	R88A-CAGE010S	
	15 m	R88A-CAGE015S	
	20 m	R88A-CAGE020S	
	30 m	R88A-CAGE030S	
	40 m	R88A-CAGE040S	
	50 m	R88A-CAGE050S	

Note: 1. Different connectors are used for the motor power and the brake on 100-V and 200-V, 3,000-r/min Servomotors of 50 to 750 W and Servomotors of 6 to 15 kW. When using a Servomotor with a brake, two cables are required: a Power Cable without Brake and a Brake Cable.

<sup>2.</sup> For non-flexible power cables for Servomotors of 11 or 15 kW, refer to the G5 series USER'S MANUAL and make your own cable. Confirm the Manual No. that is listed in Related Manuals.

## **Brake Cable**

Specifications		Non-flexible Cables
		Model
[100 V][200 V] 3,000-r/min Servomotors of 50 to 750 W	3 m	R88A-CAKA003B
	5 m	R88A-CAKA005B
	10 m	R88A-CAKA010B
	15 m	R88A-CAKA015B
	20 m	R88A-CAKA020B
	30 m	R88A-CAKA030B
	40 m	R88A-CAKA040B
	50 m	R88A-CAKA050B
	3 m	R88A-CAGE003B
[200 V][400 V]	5 m	R88A-CAGE005B
1,500-r/min	10 m	R88A-CAGE010B
Servomotors of 7.5 to 15 kW 1,000-r/min Servomotors of 6 kW	15 m	R88A-CAGE015B
	20 m	R88A-CAGE020B
	30 m	R88A-CAGE030B
	40 m	R88A-CAGE040B
	50 m	R88A-CAGE050B

## **Encoder Cable**

Specifications		Non-flexible Cables
		Model
[100 V/200 V] 3,000-r/min Servomotors of 50 to 750 W	3 m	R88A-CRKA003C
	5 m	R88A-CRKA005C
	10 m	R88A-CRKA010C
	15 m	R88A-CRKA015C
	20 m	R88A-CRKA020C
	30 m	R88A-CRKA030C
	40 m	R88A-CRKA040C
	50 m	R88A-CRKA050C
[100 V and 200 V] 3,000-r/min Servomotors of 1.0 kW or more 2,000-r/min Servomotors 1,500-r/min Servomotors 1,000-r/min Servomotors [400 V] 3,000-r/min Servomotors 2,000-r/min Servomotors 1,500-r/min Servomotors 1,000-r/min Servomotors	3 m	R88A-CRKC003N
	5 m	R88A-CRKC005N
	10 m	R88A-CRKC010N
	15 m	R88A-CRKC015N
	20 m	R88A-CRKC020N
	30 m	R88A-CRKC030N
	40 m	R88A-CRKC040N
	50 m	R88A-CRKC050N

### <Flexible Cables>

#### Power cable

Specifications		Without brake	With brake	
		Model	Model	
	3 m	R88A-CAKA003SR		
	5 m	R88A-CAKA005SR	Note: There are separate connectors for	
	10 m	R88A-CAKA010SR	power and brakes for 3,000-r/min	
[100 V/200 V]	15 m	R88A-CAKA015SR	Servomotors of 50 to 750W. When a Servomotor with a brake is used, it is	
3,000-r/min Servomotors of 50 to 750 W	20 m	R88A-CAKA020SR	necessary to use both a PowerCable	
	30 m	R88A-CAKA030SR	for Servomotors without brakes and Power cable.	
	40 m	R88A-CAKA040SR		
	50 m	R88A-CAKA050SR		
	3 m	R88A-CAGB003SR	R88A-CAGB003BR	
	5 m	R88A-CAGB005SR	R88A-CAGB005BR	
[200 V]	10 m	R88A-CAGB010SR	R88A-CAGB010BR	
3,000-r/min Servomotors of 1 to 2 kW	15 m	R88A-CAGB015SR	R88A-CAGB015BR	
2,000-r/min Servomotors of 1 to 2 kW 1,000-r/min Servomotors of 900 W	20 m	R88A-CAGB020SR	R88A-CAGB020BR	
1,000-1/IIIII Servoinotors of 900 W	30 m	R88A-CAGB030SR	R88A-CAGB030BR	
	40 m	R88A-CAGB040SR	R88A-CAGB040BR	
	50 m	R88A-CAGB050SR	R88A-CAGB050BR	
	3 m	R88A-CAGB003SR	R88A-CAKF003BR	
	5 m	R88A-CAGB005SR	R88A-CAKF005BR	
[400 V]	10 m	R88A-CAGB010SR	R88A-CAKF010BR	
3,000-r/min Servomotors of 750 W to 2 kW	15 m	R88A-CAGB015SR	R88A-CAKF015BR	
2,000-r/min Servomotors of 400 W to 2 kW 1,000-r/min Servomotors of 900 W	20 m	R88A-CAGB020SR	R88A-CAKF020BR	
1,000-1/IIIII Servoinotors of 900 vv	30 m	R88A-CAGB030SR	R88A-CAKF030BR	
	40 m	R88A-CAGB040SR	R88A-CAKF040BR	
	50 m	R88A-CAGB050SR	R88A-CAKF050BR	
[200 V] [400 V] 3,000-r/min Servomotors of 3 to 5 kW 2,000-r/min Servomotors of 3 to 5 kW 1,000-r/min Servomotors of 4.5 kW	3 m	R88A-CAGD003SR	R88A-CAGD003BR	
	5 m	R88A-CAGD005SR	R88A-CAGD005BR	
	10 m	R88A-CAGD010SR	R88A-CAGD010BR	
	15 m	R88A-CAGD015SR	R88A-CAGD015BR	
	20 m	R88A-CAGD020SR	R88A-CAGD020BR	
	30 m	R88A-CAGD030SR	R88A-CAGD030BR	
	40 m	R88A-CAGD040SR	R88A-CAGD040BR	
	50 m	R88A-CAGD050SR	R88A-CAGD050BR	

Note: 1. Different connectors are used for the motor power and the brake on 100-V and 200-V, 3,000-r/min Servomotors of 50 to 750 W and Servomotors of 6 to 15 kW. When using a Servomotor with a brake, two cables are required: a Power Cable without Brake and a Brake Cable.

Note: 2. For flexible power cables for Servomotors of 11 to 15 kW, refer to the G5 series USER'S MANUAL and make your own cable.

For flexible power cables for Servomotors of 6 to 7.5 kW, refer to the G5 series USER'S MANUAL and make your own power cable.

### **Brake Cable**

Diano Gabio			
Specifications		Flexible Cables	
		Model	
[100 V] [200 V] 3,000-r/min Servomotors of 50 to 750 W	3 m	R88A-CAKA003BR	
	5 m	R88A-CAKA005BR	
	10 m	R88A-CAKA010BR	
	15 m	R88A-CAKA015BR	
	20 m	R88A-CAKA020BR	
	30 m	R88A-CAKA030BR	
	40 m	R88A-CAKA040BR	
	50 m	R88A-CAKA050BR	

Note: For flexible brake cables for Servomotors of 6 to 15 kW, refer to the G5 series USER'S MANUAL and make your own brake cable. Confirm the Manual No. that is listed in Related Manuals.

### **Encoder Cable**

Specifications		Flexible Cables
		Model
[100 V/200 V] 3,000-r/min Servomotors of 50 to 750 W	3 m	R88A-CRKA003CR
	5 m	R88A-CRKA005CR
	10 m	R88A-CRKA010CR
	15 m	R88A-CRKA015CR
(for both absolute	20 m	R88A-CRKA020CR
encoders and incremental encoders)	30 m	R88A-CRKA030CR
	40 m	R88A-CRKA040CR
	50 m	R88A-CRKA050CR
	3 m	R88A-CRKC003NR
[100 V and 200 V] 3,000-r/min Servomotors	5 m	R88A-CRKC005NR
of 1.0 kW or more 2,000-r/min Servomotors	10 m	R88A-CRKC010NR
1,500-r/min Servomotors 1,000-r/min Servomotors 1,000-r/min Servomotors 2,000-r/min Servomotors 1,500-r/min Servomotors 1,500-r/min Servomotors	15 m	R88A-CRKC015NR
	20 m	R88A-CRKC020NR
	30 m	R88A-CRKC030NR
	40 m	R88A-CRKC040NR
	50 m	R88A-CRKC050NR