*Lens Removal and Replacement

Step 1.)

Follow steps 1-5 to gain access and Locate the 2 spring clips.



Step 2.)

While holding the lens, carefully depress spring with a flat head screwdriver near serrated teeth to loosen the grip of the spring to the lens. DO NOT ATTEMPT TO USE FINGERS.

CAUTION:

Do not over exert or attempt to bend spring. Doing this may jeopardize the functionality of the spring, which is to retain the





LED IMPORTANT SAFETY INSTRUCTIONS

U219811: FSL LENS REMOVAL AND SERVICING GUIDE

READ AND FOLLOW ALL SAFETY INSTRUCTIONS! SAVE THESE INSTRUCTIONS AND DELIVER TO OWNER AFTER INSTALLATION

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and
 other hazards please read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Installation and service of luminaires should be performed by a qualified licensed electrician.
- Maintenance of the luminaires should be performed by person(s) familiar with the luminaires' construction and operation and any hazards involved. Regular fixture maintenance programs are recommended.
- It will occasionally be necessary to clean the outside of the refractor/lens. Frequency of cleaning will depend on ambient
 dirt level and minimum light output which is acceptable to user. Refractor/lens should be washed in a solution of warm
 water and any mild, non-abrasive household detergent, rinsed with clean water and wiped dry. Should optical assembly
 become dirty on the inside, wipe refractor/lens and clean in above manner, replacing damaged gaskets as necessary.
- DO NOT INSTALL DAMAGED PRODUCT! This luminaire has been properly packed so that no parts should have been
 damaged during transit. Inspect to confirm. Any part damaged or broken during or after assembly should be replaced.
- Recycle: For information on how to recycle LED electronic products, please visit www.epa.gov.
- These instructions do not purport to cover all details or variations in equipment nor to provide every possible contingency
 to meet in connection with installation, operation, or maintenance. Should further information be desired or should
 particular problems arise which are not covered sufficiently for the purchaser's or owner's purposes, this matter should be
 referred to Acuity Brands Lighting. Inc.



WARNING RISK OF ELECTRIC SHOCK

- ✓ Disconnect or turn off power before installation or servicing.
- Verify that supply voltage is correct by comparing it with the luminaire label information.
- ✓ Make all electrical and grounded connections in accordance with the National Electrical Code (NEC) and any applicable local code requirements.
- All wiring connections should be capped with UL approved recognized wire connectors.



WARNING RISK OF BURN

- Allow lamp/fixture to cool before handling.
 Do not touch enclosure or light source.
- Do not exceed maximum wattage marked on luminaire label.
- Follow all manufacturer's warnings, recommendations and restrictions for: driver type, burning position, mounting locations/methods, replacement and recycling.



CAUTION RISK OF INJURY

- ✓ Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.



CAUTION RISK OF FIRE

- ✓ Keep combustible and other materials that can burn, away from lamp/lens.
- Do not operate in close proximity to persons, combustible materials or substances affected by heat or drying.

U219811 1/22/2014 REV. B



LED IMPORTANT SAFETY INSTRUCTIONS

U219811: FSL LENS REMOVAL AND SERVICING GUIDE



CAUTION: RISK OF PRODUCT DAMAGE

- ✓ Never connect components under load.
- ✓ Do not mount or support these fixtures in a manner that can cut the outer jacket or damage wire
- √ Unless individual product specifications deem otherwise: Never connect an LED product directly to a dimmer packs, occupancy sensors, timing devices, or other related control devices. LED fixtures must be powered directly off a switched circuit.
- √ Unless individual product specifications deem otherwise: Do not restrict fixture ventilation. Allow for some volume of airspace around fixture. Avoid covering LED fixtures with insulation, foam, or other material that will prevent convection or conduction cooling.
- √ Unless individual product specifications deem otherwise: Do not exceed fixtures maximum ambient
- ✓ Only use fixture in its intended location.
- ✓ LED products are Polarity Sensitive. Ensure proper Polarity before installation.
- ✓ Electrostatic Discharge (ESD): ESD can damage LED fixtures. Personal grounding equipment must be worn during all installation or servicing of the unit.
- √ Do not touch individual electrical components as this can cause ESD, shorten lamp life, or alter
- ✓ Some components inside the fixture may not be serviceable. In the unlikely event your unit may require service, stop using the unit immediately and contact an ABL representative for assistance.
- √ Always read the fixtures complete installation instructions prior to installation for any additional fixture. specific warnings.

Please see product specific installation instructions for additional warnings or any applicable FCC or other regulatory

Failure to follow any of these instructions could void product warranties. For a complete listing of product Terms and Conditions, please visit www.acuitybrands.com.

Our Brands

Indoor/Outdoor Lithonia Lightin Carandini Holophane RELOC

Light Concepts

Indoor Lighting

Mark Architectural Lighting

Outdoor Lighting American Electric Lighting Antique Street Lamps

Controls DARK TO LIGHT LC&D ROAM

Sensor Switch

Acuity Brands Lighting, Inc. assumes no responsibility for claims arising out of improper or careless installation or handling of its products.

ABL LED General Warnings, Form No. 503.203

© 2010 Acuity Brands Lighting, Inc. All rights reserved. 12/01/10

Step 1.)



Disconnect power from fixture, being sure to read all cautions listed above.





Using one finger, depress the corners of the lens where the lens meets the rails. Locate the side that does not contain spring clips. This side will depress easier than the side containing the clips.

Step 3.)

On the side that can be depressed, depress and slide the acrylic lens towards the center of the luminaire causing the lens to bow downward and away from the fixture.



Step 4.)

Using your other hand, gently pull the lens down from the center of the lens. Untuck the edge of the lens that is free.



Step 5.)

Gently handle the acrylic lens to service (bend lens as necessary to gain additional access).

CAUTION:

Lens may crack if subjected to stresses and angles above 90 degrees!

Only remove the lens if full access or replacement is necessary

U219811 1/22/2014 REV. B



Daylighting

SunOptics