

# Liteline RECESSED LIGHTING • LUMINAIRE ENCASTRE

## RECESSED CLIPS FOR FORUM LED PANELS

### FIXATIONS ENCASTRÉES POUR PANNEAU À DEL FORUM

### Replacement No.: LEDP-CLIPS

**NOTE: RECESSED CLIPS SHOULD BE INSTALLED ON FORUM LED PANELS ONLY. RETAIN FOR FUTURE REFERENCE.**

**IMPORTANT:** Read all instructions before installing fixtures. Retain for future reference.

**SAFETY:** For your safety, all electrical work should be done in accordance to local electrical codes and ordinances. All electrical work should be done by a qualified electrician.



**WARNING:** Make certain power is OFF from the electrical panel before starting installation or attempting any maintenance. Indoor installation only.

**REMARQUE : FIXATIONS ENCASTRÉES DOIVENT ÊTRE INSTALLÉS SUR DES PANNEAU À DEL FORUM SEULEMENT. CONSERVEZ À DES FINS DE RÉFÉRENCE.**

**IMPORTANT :** Lisez toutes les consignes avant d'installer l'appareil. Conservez à des fins de référence.

**SÉCURITÉ :** Pour votre sécurité, tout le travail électrique devrait être effectué en conformément aux codes et règlements électriques locaux. Tout le travail électrique devrait être effectué par un électricien qualifié.

**AVERTISSEMENT :** Assurez-vous que le courant est coupé à partir du panneau électrique avant de commencer l'installation ou l'entretien. Installation à l'intérieur seulement.

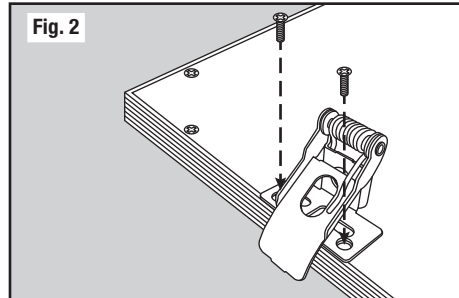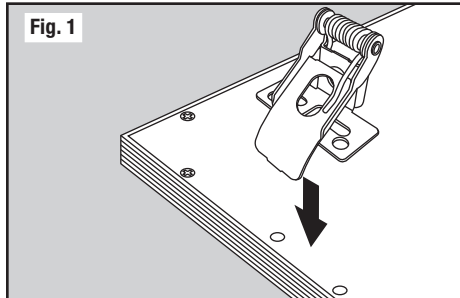

**KIT INCLUDES:**

- Recessed clips
- Mounting screws

**INSTALLATION INSTRUCTIONS:**

1. Align the holes on the recessed clips with the pre-existing holes on the back of the panel [Fig. 1].
2. Place the recessed clip onto each location and secure in place with mounting screws [Fig. 2].

Panel Size	No. of Clips Required
1x1	2
1x2	4
1x4	6
2x2	4
2x4*	6
6INx2	4
6INx4	6

\* 2x4 Panels requires additional 1/2" drywall trim around the cut hole to prevent sagging [Fig. 7].

**LA TROUSSE COMPREND :**

- Fixations encastrées
- Vis de montage

**INSTRUCTIONS D'INSTALLATION :**

1. Aligner les trous des fixations encastrées et les trous existants à l'arrière du panneau [Fig. 1].
2. Placer les fixations encastrées dans chaque emplacement et les visser au moyen des vis de montage [Fig. 2].

Taille du panneau	Nombre de fixations requises
1x1	2
1x2	4
1x4	6
2x2	4
2x4*	6
6POx2	4
6POx4	6

\* Les panneaux 2 x 4 nécessitent une garniture de cloison sèche supplémentaire de 1/2 po autour du trou coupé pour éviter l'affaissement [Fig. 7].

3. Bring the FORUM panel close to the installation location and connect the wires [Fig. 3].

**NOTE:** Wire FORUM panel in accordance to the installation instructions provided with the panel.

4. Flip the recessed clips on one side of the panel upwards and insert through the trimless adapter opening [Fig. 4].
5. Flip the recessed clips on the other side of the panel and insert through the trimless adapter opening [Fig. 5].
6. Ensure that the panel is seated properly and is flush with the edge of the trimless adapter [Fig. 6].

3. Apporter le panneau FORUM près de l'emplacement de l'installation et brancher les fils [Fig. 3].

**REMARQUE :** Brancher le panneau FORUM selon les instructions d'installation fournies avec le panneau.

4. Retourner les fixations encastrées vers le haut sur un côté du panneau et les insérer dans l'ouverture de l'adaptateur dans garniture [Fig. 4].
5. Retourner les fixations encastrées de l'autre un côté du panneau et les insérer dans l'ouverture de l'adaptateur sans garniture [Fig. 5].
6. S'assurer que le panneau est correctement installé et que le panneau et l'adaptateur sans garniture sont de niveau [Fig. 6].

