


# Keyed Selector Switches

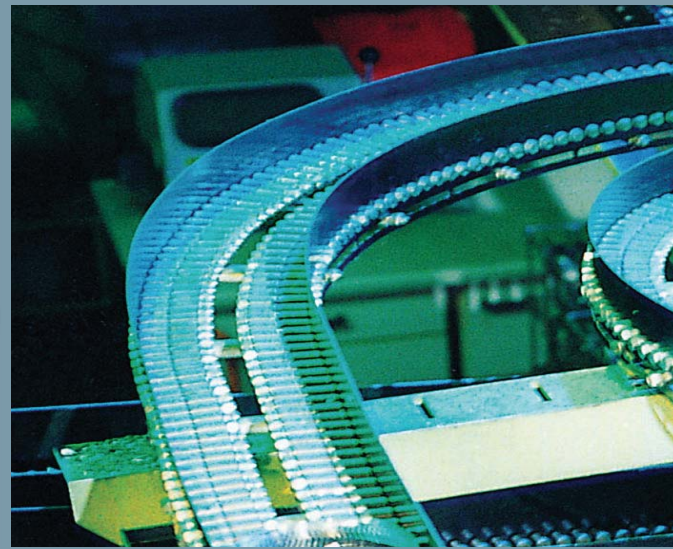

## Ordering Guide: Keyed Selector Switches

### Example:

#### 52SC6AFK1

- Keyed Selector Switch, 30mm
- Chrome, Standard
- 2-Pos, Maintained
- Key removal in left position
- Cam A
- 1 NC

#### 52SC5BEX300

- Keyed Selector Switch, 30mm
- Chrome, Non-standard key
- 3-Pos, Maintained
- Key removal in all positions
- Cam B
- Lock/key number 548CH


<b>Selection</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>
<b>Catalog Number</b>	<b>52</b>	<b>S</b>	<b>C</b>	<b>6</b>	<b>A</b>	<b>F</b>	<b>K1</b>

Use the selection information below to build your keyed selector switch catalog number. Please contact your Siemens account manager for further ordering details.

<p><b>Selection (1)</b> <b>Class</b> 52 Pushbutton (Oil Tight)</p>	<p><b>(2)</b> <b>Type</b> S Keyed Selector Switch</p>	<p><b>(3)</b> <b>Model</b> C Chrome</p>	<p><b>(4)</b> <b>Style</b> 5 Non-standard Lock/Key<sup>1</sup> 6 Standard Lock/Key</p>
<p><b>Selection (5)</b> <b>Cam</b> A 2 Pos: CAM A B 3 Pos: CAM B C 3 Pos: CAM C D 3 Pos: CAM D E 3 Pos: CAM E G 3 Pos: CAM G H 4 Pos: CAM H</p> <p>Please see page 29 for Cam selection</p>	<p><b>(6)</b> <b>Lock Type</b> <b>2 Position</b> E Maintained, removal in both positions F Maintained, removal in left G Maintained, removal in right X Spring return from right, lock left</p> <p><b>3 Position</b> E Maintained, removal in all positions F Maintained, removal in left G Maintained, removal in right H Maintained, removal in center J Maintained, removal in left and right K Maintained, removal in left and center M Maintained, removal in right and center T Spring return from left, lock center U Spring return from right, lock center V Spring return from left and right, lock center W Spring return from left, lock right Y Spring return from left, lock center and right Z Spring return from right, lock left and center</p> <p><b>4 Position</b> E Maintained, removal in all positions F Maintained, removal in left G Maintained, removal in right</p>	<p><b>(7)</b> <b>Optional: Contact Blocks and Mounting Positions</b> A0 1 NO - 1 NC (1-52BJK) Mounted on left A1 1 NO - 1 NC (1-52BJK) Mounted on right A2 2 NO - 2 NC (2-52BJK) Mounted one left and one right J0 1 NC (1-52BAJ) Mounted on left J1 1 NC (1-52BAJ) Mounted on right J2 2 NC (2-52BAJ) Mounted one left &amp; one right J2K1 2NC - 1 NO (2-52BAJ and 1-52BAK) Mounted one left (52BAJ) and one right (52BAK) K0 1 NO (1-52BAK) Mounted on left K1 1 NC (1-52BAK) Mounted on right K2 2 NC (2-52BAK) Mounted one left &amp; one right</p>	<p>Additional contact block combination arrangements are available upon request. See contact block table on page 32 for a complete list of contact block offerings.</p> <p>See table at top of page 34 for contact block position.</p>

<sup>1</sup> Please append X\_\_\_ to the end of the catalog number to specify which non-standard lock/key to use. For example, append X299 to get lock/key number 549CH.

X298 = 550CH  
X299 = 549CH  
X300 = 548CH  
X301 = 547CH  
X302 = 546CH

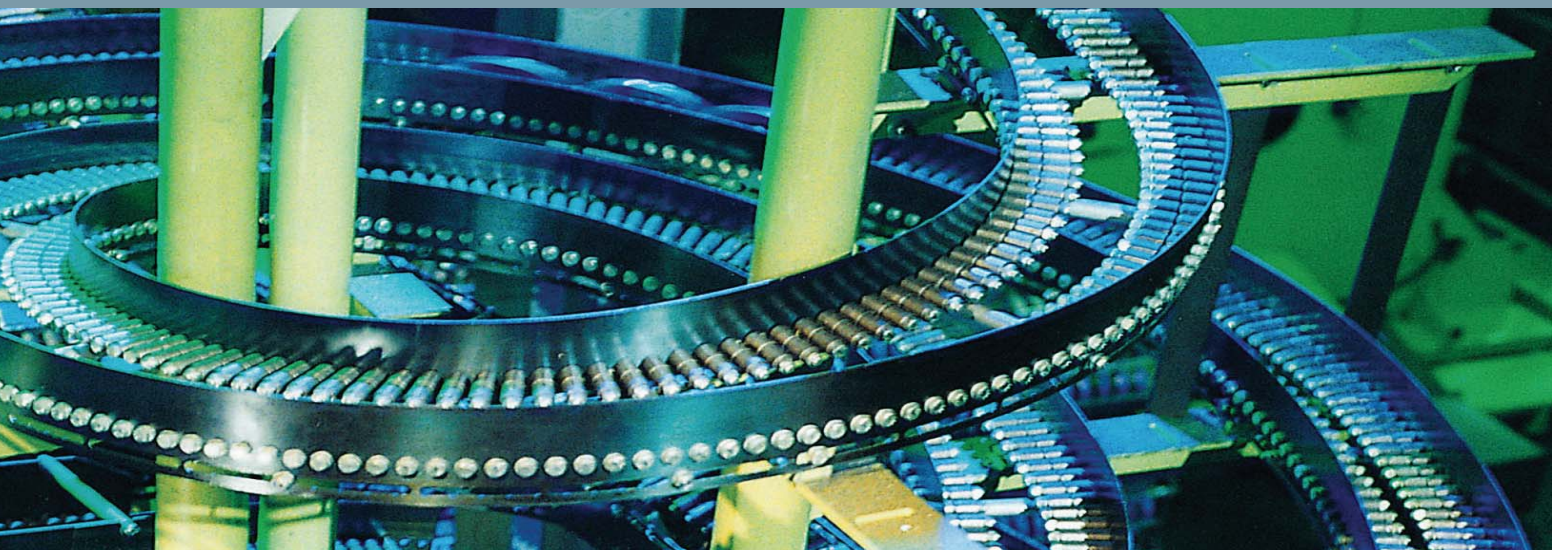

## Stock Product

The listed keyed selector switches are just a selection of stocked product. Please consult your Siemens accountmanager for a complete list of stocked product.

CHROME Keyed Selector Switches, 30mm

Catalog ID	Pos / Funct	Cam	Key Removal	Key Type	Contacts
52SC6AE	2-Pos, Maintained	A-Cam	All	501CH	
52SC6AF	2-Pos, Maintained	A-Cam	Left	501CH	
52SC6AFK1	2-Pos, Maintained	A-Cam	Left	501CH	1NO (left)
52SC6AX	2-Pos, Spring Return From Right	A-Cam	Left	501CH	
52SC6BE	3-Pos, Maintained	B-Cam	All	501CH	
52SC6BH	3-Pos, Maintained	B-Cam	Center	501CH	
52SC6CE	3-Pos, Maintained	C-Cam	All	501CH	
52SC6BV	3-Pos, Spring Return From Left and Right	B-Cam	Center	501CH	
52SC6HG	4-Pos, Maintained	H-Cam	Right	501CH	