3/8" DRIVE IMPACT SOCKETS - 6 POINT

- Proto® 6 Point Impact Sockets are ideal for use on stubborn or damaged fasteners, and also on fasteners made from soft materials.
- TorquePlus™ features apply.
- Size stamped on tool for easy identification.
- Side locking hole.

TORQUEPLUS FASTENING SYSTEM

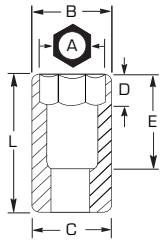

Product #	Size (in) (A)	Nut End Outside Dia. (in) (B)	Drive End Outside Dia. (in) (C)	Nut Depth (in) (D)	Bolt Clearance Depth (in) (E)	Overall Length (in) (L)	Weight (lbs)
J7208H	1/4	7/16	11/16	9/32	19/32	1-3/32	0.07
J7209H	9/32	31/64	11/16	5/16	19/32	1-3/32	0.07
J7210H	5/16	1/2	11/16	5/16	19/32	1-3/32	0.07
J7211H	11/32	35/64	11/16	3/8	19/32	1-3/32	0.07
J7212H	3/8	19/32	11/16	3/8	19/32	1-3/32	0.07
J7214H	7/16	11/16	11/16	3/8	19/32	1-3/32	0.06
J7216H	1/2	3/4	3/4	3/8	19/32	1-3/32	0.08
J7218H	9/16	13/16	13/16	9/16	19/32	1-3/32	0.11
J7220H	5/8	29/32	29/32	9/16	19/32	1-3/32	0.12
J7222H	11/16	1	1	9/16	19/32	1-3/32	0.15
J7224H	3/4	1-1/16	1-1/16	17/32	19/32	1-3/32	0.16
J7226H	13/16	1-3/16	1-13/64	11/16	23/32	1-7/32	0.24
J7228H	7/8	1-9/32	1-9/32	11/16	23/32	1-7/32	0.26
J7230H	15/16	1-23/64	1-23/64	51/64	27/32	1-11/32	0.35
J7232H	1	1-1/2	1-1/2	51/64	27/32	1-11/32	0.42

ASME B107.2

3/8" DRIVE METRIC IMPACT SOCKETS - 6 POINT

METRIC

- Proto® 6 Point Impact Sockets are ideal for use on stubborn or damaged fasteners, and also on fasteners made from soft materials.
- TorquePlus™ features apply.
- Socket size stamped on tool for easy identification.
- Side locking hole.

TORQUEPLUS FASTENING SYSTEM

Product #	Size (mm) (A)	Nut End Outside Dia. (in) (B)	Drive End Outside Dia. (in) (C)	Nut Depth (in) (D)	Bolt Clearance Depth (in) (E)	Overall Length (in) (L)	Weight (lbs)
J7206M	6	27/64	11/16	7/32	27/64	59/64	0.06
J7207M	7	31/64	11/16	15/64	27/64	59/64	0.06
J7208M	8	33/64	11/16	5/16	17/32	1-1/32	0.06
J7209M	9	37/64	11/16	11/32	17/32	1-1/32	0.06
J7210M	10	11/16	11/16	3/8	17/32	1-1/32	0.06
J7211M	11	11/16	11/16	13/32	17/32	1-1/32	0.06
J7212M	12	23/32	23/32	7/16	17/32	1-1/32	0.07
J7213M	13	3/4	3/4	7/16	17/32	1-3/32	0.08
J7214M	14	13/16	13/16	9/16	19/32	1-3/32	0.09
J7215M	15	55/64	55/64	9/16	19/32	1-3/32	0.10
J7216M	16	29/32	29/32	9/16	19/32	1-3/32	0.12
J7217M	17	1	1	9/16	19/32	1-3/32	0.15
J7218M	18	1-1/32	1-1/32	9/16	19/32	1-3/32	0.16
J7219M	19	1-1/16	1-1/16	17/32	19/32	1-3/32	0.15
J7220M	20	1-7/64	1-7/64	17/32	19/32	1-3/32	0.18
J7221M	21	1-5/32	1-5/32	17/32	19/32	1-3/32	0.19
J7222M	22	1-13/64	1-13/64	17/32	19/32	1-3/32	0.20
J7223M	23	1-1/4	1-1/4	17/32	19/32	1-3/32	0.26
J7224M	24	1-19/64	1-19/64	17/32	19/32	1-3/32	0.27

ASME B107.33M

WARNING: WORK SAFELY WITH TOOLS. WEAR SAFETY GOGGLES.