

XP-702
MICRO PANEL



Manufacturer

Eaton Automation AG
Spinnereistrasse 8-14
CH-9008 St. Gallen
Switzerland
www.eaton-automation.com/en
www.eaton.com

Support**Region North America**

Eaton Corporation
Electrical Sector
1111 Superior Ave.
Cleveland, OH 44114
United States
877-ETN-CARE (877-386-2273)
www.eaton.com

Other regions

Please contact your local supplier or send an Email
to: automation@eaton.com

Original instructions

The German version of this document is the original instructions.

Translations of the original instructions

All non-German editions of this document are translations of the original instructions.

Editor

Monika Jahn

Brand and product names

All brand and product names are trademarks or registered trademarks of the owner concerned.

Copyright

© Eaton Automation AG, CH-9008 St. Gallen

All rights reserved, also for the translation.

None of this document may be reproduced or processed, duplicated or distributed by electronic systems in any form (print, photocopy, microfilm or any other process) without the written permission of Eaton Automation AG, St. Gallen.

Subject to modifications.

Contents

1	General	7
1.1	Purpose of these Operating Instructions.....	7
1.2	Comments about this document.....	7
1.3	Additional documentation.....	7
2	Device description	9
2.1	Function.....	9
2.2	Intended use.....	9
2.3	Device versions.....	9
2.3.1	Devices with 1 GHz (XP-702-C...).....	10
2.3.2	Devices with 1.8 GHz (XP-702-D...).....	10
2.4	Package contents.....	11
2.4.1	BOX devices.....	11
2.4.2	8.4" devices.....	11
2.4.3	10.4" and 12.1" devices.....	11
2.4.4	15" devices.....	12
2.5	Accessories.....	13
2.6	Designation.....	14
3	Safety regulations	15
3.1	General.....	15
3.2	Meaning of symbols.....	16
3.3	Mandatory requirements, personnel.....	17
3.3.1	Work safety.....	17
3.3.2	Qualification of personnel.....	17
3.3.3	Operating Instructions.....	17
3.3.4	Installation, maintenance and disposal.....	17
3.3.5	Prohibited use.....	17
3.3.6	Requirements for proper operation.....	18
3.4	Device related hazards.....	19
4	Operating and indication elements	21
4.1	Operating and indication elements on the front.....	21
4.2	Operating elements on the service side.....	22
4.3	Indication elements on the service side.....	23
5	Installation	25
5.1	Safety regulations.....	25
5.2	Requirements for the place of installation.....	26
5.2.1	Requirements for the mounting position.....	26
5.3	Cable preparation.....	27
5.3.1	Overview of interfaces.....	28
5.3.2	Preparation of cables with D-Sub connector.....	29
5.3.3	Power supply.....	31
5.3.4	RS232 (Com Port).....	32
5.3.5	Ethernet.....	33

Contents

5.3.6	USB Host	34
5.3.7	PCI	34
5.3.8	VGA.....	35
5.3.9	DVI	35
5.4	Preparing the device for operation	36
5.4.1	Fitting a PCI expansion card in the device	38
5.4.2	Inserting and removing a CF card	40
5.4.3	Fitting a hard disk in the device.....	42
5.4.4	Mounting the active cooling unit.....	44
5.4.5	Mounting a device with a display	45
5.4.6	Mounting a BOX device	50
6	Operation	51
6.1	Safety regulations	51
6.2	Starting the device	52
6.3	Switching off the device	52
7	Maintenance and service.....	53
7.1	Safety regulations	53
7.2	Maintenance.....	54
7.2.1	Cleaning the infra-red touch.....	54
7.2.2	Recalibrating the infra-red touch	54
7.2.3	Replacing the battery	55
7.3	Service	56
7.3.1	Repairs.....	56
7.3.2	Replacing the active cooling unit.....	57
7.4	Troubleshooting	59
7.4.1	Activate the second display.....	60
8	Storage, transport and disposal	63
8.1	Safety regulations	63
8.2	Storage.....	63
8.3	Transport.....	63
8.4	Disposal	64
9	Technical data	65
9.1	Dimensions and weights	65
9.1.1	BOX devices	65
9.1.2	8.4" devices.....	66
9.1.3	10.4" devices.....	67
9.1.4	12.1" devices.....	68
9.1.5	15" devices.....	69
9.2	Display	70
9.3	Touch sensor	71
9.4	System	71
9.5	Interfaces	72
9.5.1	Power supply.....	73
9.6	Enclosure ratings	76
9.7	Agency approvals and standards.....	77

9.8	Applicable standards and regulations	77
9.9	Ambient conditions	78


Contents

1 General

1.1 Purpose of these Operating Instructions

These Operating Instructions contain the information required for the correct and safe use of the MICRO PANELs XP-702. The Operating Instructions are part of the devices and must therefore be kept nearby.

These Operating Instructions describe all aspects of the devices: transport, installation, commissioning, operation, maintenance, storage and disposal. The operating system and the application software are not described.

 **Read Chapter 3 Safety regulations, 15 before working with the device. This contains important information for your personal safety. This chapter must be read and understood by all persons working with this device.**

WARNING



Incomplete copy of the Operating Instructions

Working with individual pages of these Operating Instructions may cause damage to property or personnel by failure to observe safety-related information.

▶ Always work with the complete document.

1.2 Comments about this document

Please send any comments, recommendations or suggestions relating to this document to info-automation@eaton.com.

1.3 Additional documentation

The following documents may be helpful in the use of the device in addition to this document. These can be downloaded from our home page (www.eaton-automation.com/en), «DOWNLOADS» section.

- [1] MN05010008Z-EN System Description Windows XP/XPe
(operation of the Windows XP/XPe operating system on MICRO PANELs)
- [2] MN05010009Z-EN System Description Networks in Brief
(information on networks in general and on the integration of PCs and MICRO PANELs in networks)

1 General

1.3 Additional documentation

2 Device description

2.1 Function

MICRO PANELs XP-702 are industrial PCs with an open system structure.

2.2 Intended use

MICRO PANELs XP-702 are primarily used in machine and system building. They are suitable for tasks in the industrial sector and are typically used in automation.

2.3 Device versions

MICRO PANELs XP-702 are available in versions with and without display with 1 GHz or 1.8 GHz.



Fig. 1 XP-702 with display



Fig. 2 XP-702 without display (BOX device)

2 Device description

2.3 Device versions

2.3.1 Devices with 1 GHz (XP-702-C...)

Basic device	Display	Interfaces, depending on the device version	XP-702 type
Version C:	Devices without display (BOX devices)	PCI and DVI	XP-702-C0-BOX
■ 1 GHz processor			
■ 1024 MByte DRAM			
■ Interfaces:	8.4" color display (TFT-LCD), SVGA, infra-red touch	PCI	XP-702-C0-84TSI
1 × Ethernet 100/10			
1 × Ethernet 1000/100/10	10.4" color display (TFT-LCD), SVGA, infra-red touch	PCI	XP-702-C0-10TSI
2 × RS232			
4 × USB Host	12.1" color display (TFT-LCD), XGA, infra-red touch	PCI	XP-702-C0-12TXI
1 × VGA			
	15" color display (TFT-LCD), XGA, infra-red touch	PCI	XP-702-C0-15TXI

Tab. 1 Device versions, 1 GHz devices (XP-702-C...)

2.3.2 Devices with 1.8 GHz (XP-702-D...)

Basic device	Display	Interfaces, depending on the device version	XP-702 type
Version D:	Devices without display (BOX devices)	PCI and DVI	XP-702-D0-BOX
■ 1.8 GHz processor			
■ 2048 MByte DRAM			
■ Interfaces:	8.4" color display (TFT-LCD), SVGA, infra-red touch	PCI	XP-702-D0-84TSI
1 × Ethernet 100/10			
1 × Ethernet 1000/100/10	10.4" color display (TFT-LCD), SVGA, infra-red touch	PCI	XP-702-D0-10TSI
2 × RS232			
4 × USB Host	12.1" color display (TFT-LCD), XGA, infra-red touch	PCI	XP-702-D0-12TXI
1 × VGA			
■ Active cooling unit	15" color display (TFT-LCD), XGA, infra-red touch	PCI	XP-702-D0-15TXI

Tab. 2 Device versions, 1.8 GHz devices (XP-702-D...)

2.4

Package contents

The accessories supplied with the MICRO PANELs XP-702 depend on the device version.

2.4.1

BOX devices

Qty	Designation
1	MICRO PANEL: <ul style="list-style-type: none"> ■ XP-702-C...-BOX or ■ XP-702-D...-BOX
1	Power supply connector
1	Active cooling unit (only supplied with XP-702-D... devices)

Tab. 3 Package contents for BOX devices

2.4.2

8.4" devices

Qty	Designation
1	MICRO PANEL: <ul style="list-style-type: none"> ■ XP-702-C...-84TSI or ■ XP-702-D...-84TSI
4	Retaining brackets with threaded pin for mounting the device
1	Sealing strip for mounting the device
1	Power supply connector
1	Active cooling unit (only supplied with XP-702-D... devices)

Tab. 4 Package contents for 8.4" devices

2.4.3

10.4" and 12.1" devices

Qty	Designation
1	MICRO PANEL: <ul style="list-style-type: none"> ■ XP-702-C...-10TSI or ■ XP-702-D...-10TSI or ■ XP-702-C...-12TXI or ■ XP-702-D...-12TXI
6	Retaining brackets with threaded pin for mounting the device
1	Sealing strip for mounting the device
1	Power supply connector
1	Active cooling unit (only supplied with XP-702-D... devices)

Tab. 5 Package contents for 10.4" and 12.1" devices

2 Device description

2.4 Package contents

2.4.4

15" devices

Qty	Designation
1	MICRO PANEL: ■ XP-702-C...-15TXI or ■ XP-702-D...-15TXI
8	Retaining brackets with threaded pin for mounting the device
1	Sealing strip for mounting the device
1	Power supply connector
1	Active cooling unit (only supplied with XP-702-D... devices)

Tab. 6 Package contents for 15" devices

2.5

Accessories

Different accessories are available. Order the accessories required from your supplier.

Accessories	Type
Windows licenses	
Windows XPe	
License for Windows XP Embedded incl. license sticker	LIC-OS-EXP-S
Windows XP	
License for Windows XP Professional incl. license sticker	LIC-OS-XP-S
XP license product papers	
GALILEOopen license product paper with license sticker	LIC-GALILEO-OPEN-XP
Memory media	
Industrial hard disk	
Industrial grade hard disk ≥ 80 GByte without operating system	HDU-A7-SI
Industrial grade hard disk ≥ 80 GByte Windows XP pre-installed without Windows license (license required (LIC-OS-XP-S))	OS-HDU-A7-SI
Consumer hard disk	
Hard disk ≥ 80 GByte without operating system	HDU-A7-S
Hard disk ≥ 80 GByte Windows XP pre-installed without Windows license (license required (LIC-OS-XP-S))	OS-HDU-A7-S
CF cards	
Compact Flash 2 GByte without operating system	MEMORY-CF-A7-S
Compact Flash 2 GByte Windows XPe pre-installed without Windows license (license required (LIC-OS-EXP-S))	OS-FLASH-A7-S
Additional retaining brackets	
4 Retaining brackets with threaded pin for mounting the device	ACCESSORIES-HKS-IP65
100 Retaining brackets with threaded pin for mounting the device	ACCESSORIES-HKS-IP65-100

2 Device description

2.6 Designation

Accessories	Type
Device accessories (supplied with the devices)	
Device accessories as replacement for 8.4" devices ■ 4 Retaining brackets with threaded pin for mounting the device ■ 1 Sealing strip for mounting the device ■ 1 Power supply connector	ACCESSORIES-TP-84-IR-1
Device accessories as replacement for 10.4", 12.1" und 15" devices ■ 8 Retaining brackets with threaded pin for mounting the device ■ 1 Sealing strip for mounting the device ■ 1 Power supply connector	ACCESSORIES-TP-15-IR-1
Cooling	
Active cooling unit	ACCESSORIES-FAN-700-S

Tab. 7 Accessories

2.6

Designation

Nameplate

A nameplate is fixed on the rear of the device in order to identify it. The nameplate contains the following information:

- Manufacturer address
- Type designation
- Power supply required
- Part no.
- Serial no.
- Time of manufacturing (week/year)
- Approval marks
- Arrangement of interfaces and operating elements

Support

To ensure fast and optimum support always provide the support personnel with the following information on the nameplate:

- Part no. (Part-No or Art.-No)
- Serial no.

3 Safety regulations

3.1 General

Hazards may still occur even though the device meets the current state of the art and complies with all recognized safety requirements.

The device must only be installed and commissioned in perfect technical condition and in compliance with this document.










Read this chapter before working with the device. This contains important information for your personal safety. This chapter must be read and understood by all persons working with this device.

3 Safety regulations
3.2 Meaning of symbols

3.2

Meaning of symbols

The following symbols are used in this document according to the hazard level described:

 DANGER	
	Signal word DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	
	Signal word WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	
	Signal word CAUTION Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.
CAUTION	
	Signal word CAUTION without safety alert symbol Indicates a situation which, if not avoided, could result in material damage.

 **Indicates useful information.**

The danger symbol used and the text indicate the actual danger and the related preventative measures.

3.3 Mandatory requirements, personnel

3.3.1 Work safety



All applicable work safety regulations (in-house and national) must be observed.

3.3.2 Qualification of personnel

The personnel responsible for installation, operation, maintenance and service must be adequately qualified. These persons must be sufficiently trained or instructed and they must be informed of all hazards and risks associated with the device.

3.3.3 Operating Instructions

It must be ensured that any person working with the device in any phase of its lifespan has read and understood the relevant sections of the Operating Instructions.

 WARNING	
	<p>Incomplete copy of the Operating Instructions</p> <p>Working with individual pages of these Operating Instructions may cause damage to property or personnel by failure to observe safety-related information.</p> <p>▶ Always work with the complete document.</p>

3.3.4 Installation, maintenance and disposal

It must be ensured that the device is properly connected, mounted, maintained and disposed of in compliance with all relevant standards and safety regulations.

3.3.5 Prohibited use

The implementation of safety functions (relating to the protection of personnel and machinery) using the device is prohibited.


3 Safety regulations

3.3 Mandatory requirements, personnel

3.3.6

Requirements for proper operation

The following points must be observed so that the device meets the contractual requirements:

- Only qualified personnel may work with the device.
- These persons must have read the Operating Instructions and must observe the requirements described.
- The ambient conditions stated must be observed. See Chapter 9.9 Ambient conditions,  78.
- The maintenance work must be carried out correctly.

No liability is accepted for damage, consequential damage and accidents caused by the following:





- Failure to observe work safety regulations
- Failure or malfunction of the device
- Improper handling or use
- Failure to observe the Operating Instructions
- Conversions, modifications and repairs to the device



Repairs, see Chapter 7.3.1 Repairs,  56.

3.4

Device related hazards

⚠ DANGER	
	<p>Explosion hazard</p> <p>Death, serious injury or material damage may occur if an electrical plug connection is removed in a potentially explosive atmosphere during operation or if the device is subjected to hazardous knocks.</p> <ul style="list-style-type: none">▶ Only use the device in the following environments:<ul style="list-style-type: none">- Environments not subject to explosion hazards- Potentially explosive atmosphere, Zone 22 (according to ATEX 94/9/EC)▶ Prevent the device from being subjected to hazardous knocks.▶ Only operate the device in potentially explosive atmospheres if it is correctly mounted.▶ Switch off the device before removing the plug connections.
⚠ WARNING	
	<p>Live parts in the device</p> <p>When the device is opened, there is a risk of electric shock if live parts are touched.</p> <ul style="list-style-type: none">▶ The device must not be opened.
⚠ WARNING	
	<p>Potential equalization currents</p> <p>Large equalization currents between the protective ground systems of different devices may cause operational malfunctions due to signal interference and may even cause fires.</p> <ul style="list-style-type: none">▶ If necessary, a potential equalization conductor should be installed parallel to the cable. This should have a cross-section that is a multiple of the cable shield.
⚠ CAUTION	
	<p>Electrostatic discharge</p> <p>Electrostatic discharge may damage or destroy electronic components.</p> <ul style="list-style-type: none">▶ Avoid contact with components (such as connector pins) that are susceptible to electrostatic discharge.▶ Discharge (by touching a grounded metal object) any static charge accumulated in your body before touching the device.

3 Safety regulations

3.4 Device related hazards

CAUTION



Data loss

During a write operation to a CF card/hard disk, this may lose data or may be destroyed if there is a power failure or if it is removed.

- ▶ Only insert and remove CF cards/hard disk when the device is in a de-energized state.
- ▶ Always secure CF cards with the CF slot cover.
- ▶ Before switching off:
 - Ensure that no software write operations to a CF card/hard disk are in progress («CF ACT» and «HD ACT» LEDs must not be lit).
 - Shut down the operating system.
- ▶ If possible, avoid write operations to CF cards/hard disk. Reasons:
 - The number of write cycles possible on CF cards is limited.
 - A power failure during write operations will most likely lead to loss of data.
- ▶ If the writing of the CF card/hard disk cannot be avoided, use an uninterruptible power supply (USP) to prevent data loss.

CAUTION



Device condensation

If the device is or was exposed to climatic changes (temperature fluctuation, air humidity) moisture can form on or in the device (device condensation). In this case, there is a risk of short-circuit.

- ▶ The device must **not** be switched on when device condensation is present.
- ▶ If condensation is present on the device, or if it was exposed to temperature fluctuations, it must be allowed to adjust to room temperature (do not expose the device to the direct heat of heating devices) prior to commissioning.

CAUTION



Cleaning the device

Damage to the device due to the use of pointed or sharp objects or by liquids.

- ▶ Do not use any pointed or sharp objects (e.g. knife) for cleaning.
- ▶ Do not use any aggressive or abrasive cleaning agent or solvent.
- ▶ Avoid any liquid entering the device (risk of short-circuit).

4 Operating and indication elements

4.1 Operating and indication elements on the front

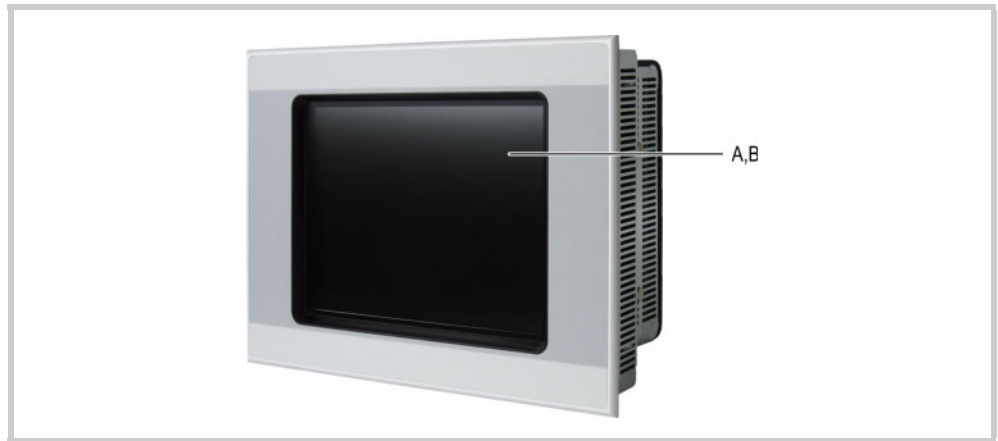


Fig. 3 Operating and indication elements on the front

The device has the following operating and indication elements on the front:

Element	Function
A Touch sensor	Infra-red touch: Detection of the actuation of the operating elements shown on the display. These devices are operated by interrupting the infra-red light matrix with your finger or a suitable object (min. \varnothing 7 mm). It is not necessary to touch the infra-red touch protective panel.
B Display	Display operating and indication elements.

Tab. 8 Operating and indication elements on the front

4 Operating and indication elements
 4.2 Operating elements on the service side

4.2 Operating elements on the service side

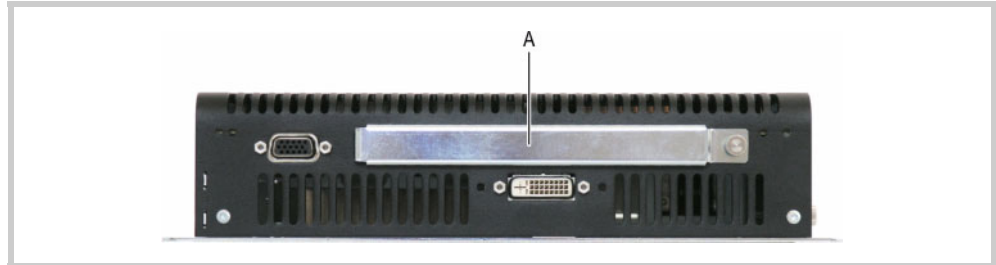


Fig. 4 Operating elements on the service side (CF slot cover fitted)

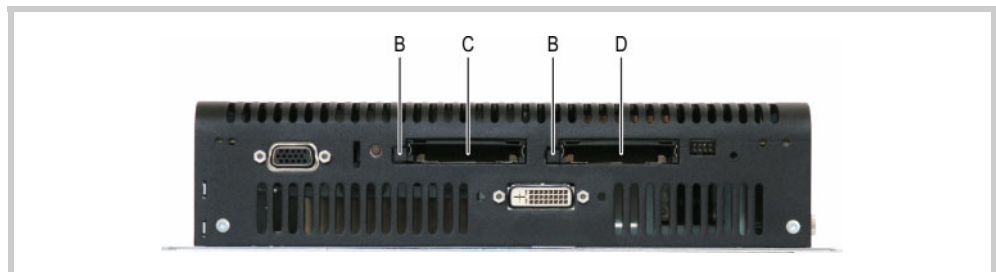


Fig. 5 Operating elements on the service side (CF slot cover removed)

The device has the following operating elements on the service side:

Element	Function
A CF slot cover	Fastening the CF card in the CF slot.
B Ejector button	Ejecting the CF card.
C CF slot 0	Slot for CF card with operating system and applications.
D CF slot 1	Slot for CF card with data.

Tab. 9 Operating elements on the service side

4.3

Indication elements on the service side

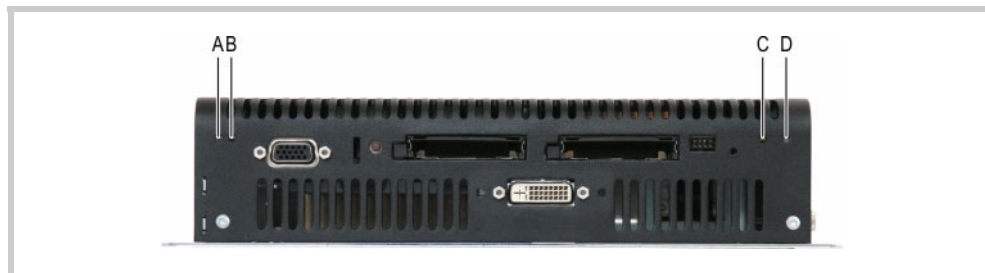


Fig. 6 Indication elements on the service side

The device has the following indication elements on the service side:

LED	Function
A SUPPLY ERR (red)	<ul style="list-style-type: none"> ■ Lit briefly after power up. ■ Lit in the event of errors. ■ Lit after power off.
B SUPPLY OK (green)	Lit during startup and operation.
C CF ACT (red)	Lit if a CF card is accessed.
D HD ACT (red)	Lit if the hard disk is accessed.

Tab. 10 Indication elements on the service side


4 Operating and indication elements

4.3 Indication elements on the service side

5 Installation

5.1 Safety regulations



Read Chapter 3 Safety regulations,  15 before installing and commissioning the device. This contains important information for your personal safety.

5 Installation

5.2 Requirements for the place of installation

5.2

Requirements for the place of installation

- Approvals:
The device must only be used in locations that are approved for the device. See the markings on the nameplate and Chapter 9 Technical data, 65.
- Power supply:
The power supply must comply with the requirements stated in Chapter 9.5.1 Power supply, 73.

5.2.1

Requirements for the mounting position

The devices can be mounted in the following objects depending on the device version:

- Devices with a display:
 - Control cabinets
 - Control panels
 - Control desks
- BOX devices:
 - Control cabinets

The devices must only be mounted horizontally. The following requirements must be fulfilled when selecting a suitable mounting position:

- The display should not be exposed to direct sunlight (the UV component of sunlight reduces the lifespan of the device and disturbs the infra-red touch sensor).
- If the device is to be used in potentially explosive atmospheres, the device must not be subjected to hazardous knocks.
- The inclination angle for vertical mounting must be max. $\pm 15^\circ$.
- The operating elements on the service side of the device and the cable connections are accessible after the device has been mounted.
- The ambient conditions stated must be observed. See Chapter 9.9 Ambient conditions, 78.
- Sufficient ventilation (cooling) must be ensured by means of:
 - Clearance of at least 5 cm to the ventilation slots
 - Clearance of at least 15 cm from heat radiating components such as heavily loaded transformers
 - The expected temperatures should be within the permissible range. See Chapter 9.9 Ambient conditions, 78.
- Properties of the mounting surfaces:
 - Material thickness at the mounting cutout 2...5 mm
 - Flatness ≤ 0.5 mm
(this requirement must also be fulfilled when the device is mounted!)
 - Surface roughness $R_z \leq 120$

5.3

Cable preparation

The cables for wiring the device are not supplied with it.

WARNING



Potential equalization currents

Large equalization currents between the protective ground systems of different devices may cause operational malfunctions due to signal interference and may even cause fires.

- ▶ If necessary, a potential equalization conductor should be installed parallel to the cable. This should have a cross-section that is a multiple of the cable shield.

CAUTION



Operational malfunctions

Use of unsuitable or improperly prepared cables, as well as incorrect wiring will mean that neither the values stated in the technical data nor the electromagnetic compatibility (EMC) can be ensured.

- ▶ Only use cables prepared by specialists.
- ▶ The cables used must be prepared according to the interface description in this document.
- ▶ The wiring instructions for the relevant interface must be observed when wiring the device.
- ▶ Any generally applicable regulations and standards must be fulfilled.

5 Installation
 5.3 Cable preparation

5.3.1 Overview of interfaces

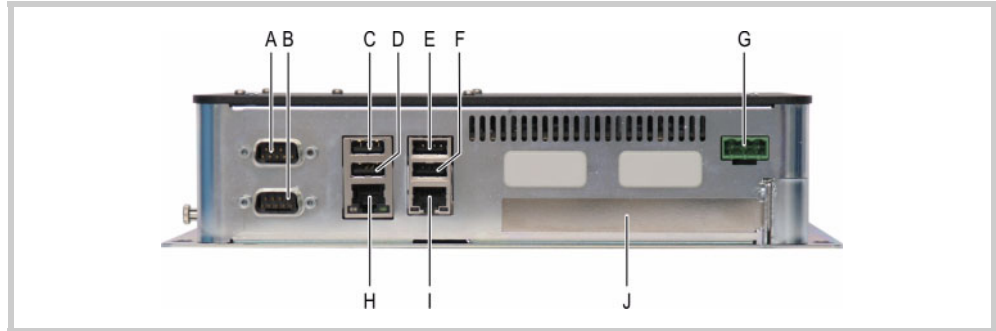


Fig. 7 Connector side of the device

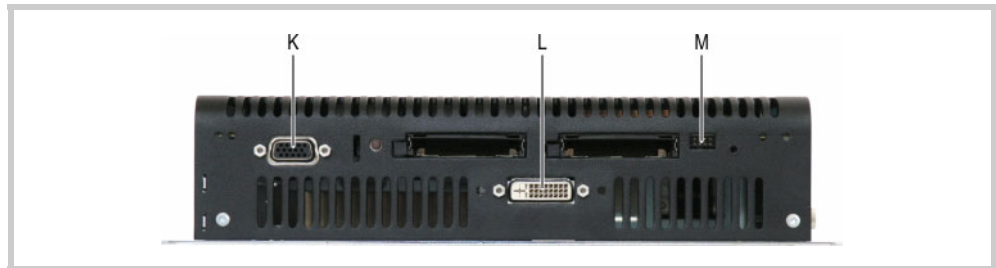


Fig. 8 Service side of the device

Interface	Interface description
A COM 1	RS232 → Chapter 5.3.4, 32
B COM 2	
C USB 1	USB Host → Chapter 5.3.6, 34
D USB 2	
E USB 3	
F USB 4	
G SUPPLY	Power supply → Chapter 5.3.3, 31
H LAN 1	Ethernet 1000Base-T / 100Base-TX / 10Base-T → Chapter 5.3.5, 33
I LAN 2	Ethernet 100Base-TX / 10Base-T → Chapter 5.3.5, 33
J PCI SLOT	PCI → Chapter 5.3.7, 34
K VGA	VGA → Chapter 5.3.8, 35
L DVI	DVI (only BOX devices) → Chapter 5.3.9, 35
M DIAG	DIAG Only for service tasks

Tab. 11 Overview of interfaces

5.3.2

Preparation of cables with D-Sub connector

The preparation of bus cables is an essential factor in ensuring reliable operation and electromagnetic compatibility (EMC).

Wiring requirements

- The cables must be shielded.
- The cable shield must be made from a copper braid.
- The cable shield must make a low impedance connection with the connector casing over a large contact area. This is achieved by:
 - Use of metal or metallized connector casings with a cable clamp for strain relief.
 - The cable clamp must be screwed securely to the connector.

Connecting the cable shield

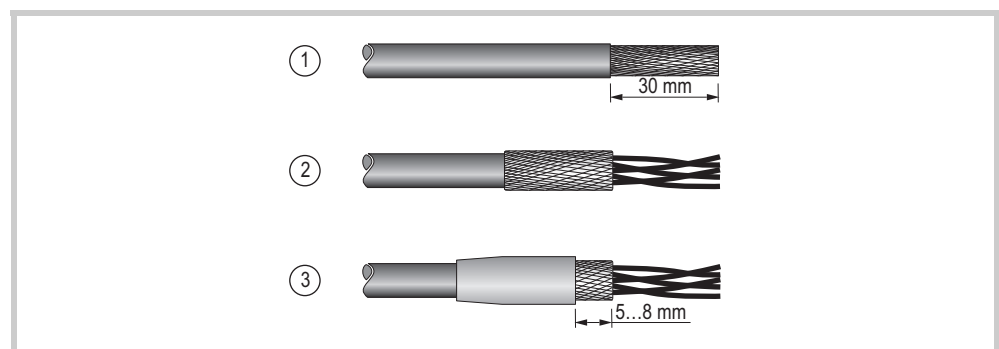


Fig. 9 Connecting the cable shield

- 1 Strip the cable end so that approx. 3 cm of the shield braid is exposed.
- 2 Fold back the shield braid over the cable shield.
- 3 Fit approx. 3 cm of heat shrinkable tubing over the folded back end of the shield braid or use a rubber grommet.
 - 5...8 mm of the shield braid must be exposed at the cable end.
 - The folded back shield braid end must be covered by the heat shrinkable tubing or by the rubber grommet.
- 4 Fit the D-Sub connector to the cable end:
 - The exposed metal shield braid must be clamped to the connector casing with the cable clamp.

5 Installation

5.3 Cable preparation

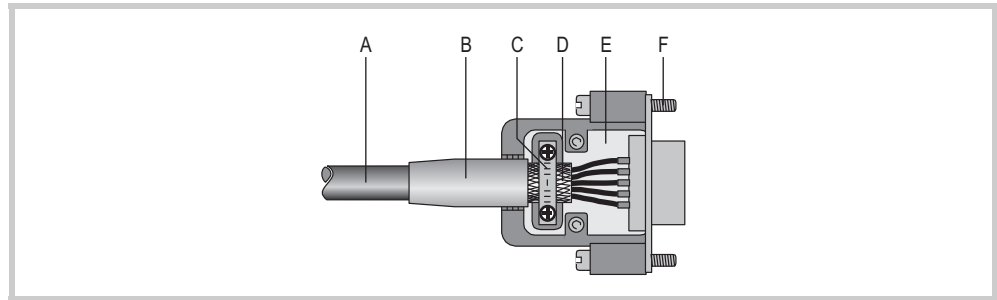


Fig. 10 Cable prepared with D-Sub connector

- | | |
|--|----------------------|
| A Cable with cable sheath | D Shield braid |
| B Heat shrinkable tubing or rubber grommet | E D-Sub connector |
| C Cable clamp | F Mounting screw UNC |



The EMC values stated in the technical data (immunity and emission) can only be guaranteed by observing the prescribed cable preparation!

5.3.3

Power supply

The device is provided with an internal fuse and is protected against polarity reversal. The functional earthing terminal is connected to both the housing and the 0 V terminal. The device power supply is **not** electrically isolated.

The device requires a 24 VDC power supply from an AC/DC converter with safe isolation (SELV). For other power supply requirements see Chapter 9.5.1 Power supply, 73.

- SELV (safety extra low voltage):
Circuit in which no dangerous voltage is present, even in the event of a single fault.



Fig. 11 Power supply interface

Wiring

- Phoenix Contact MSTB 2.5/3-ST-5.08 connector, Phoenix order no. 1757022 is supplied with the device.

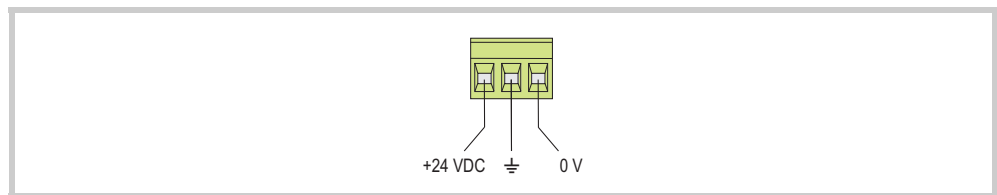


Fig. 12 Phoenix Contact MSTB 2.5/3-ST-5.08 connector (view from the wiring side)

Connection	Assignment
+24 VDC	+24 VDC power supply
⏏	Functional earthing connected to housing. Does not have to be connected.
0 V	0 V power supply (connected to ⏏)

Tab. 12 Assignment of connector

- The following must be observed when the connector wiring is prepared:

Preparing the wiring of the connector

Terminal type	Pluggable screw terminal
Cross-section	<ul style="list-style-type: none"> ■ min. 0.75 mm² / max. 2.5 mm² (lead or wire) ■ min. AWG18 / max. AWG12
Stripping length	7 mm

Tab. 13 Preparing the wiring of the connector

5 Installation

5.3 Cable preparation

5.3.4

RS232 (Com Port)

The RS232 interface is **not** electrically isolated. The GND pin is directly connected to the housing potential.

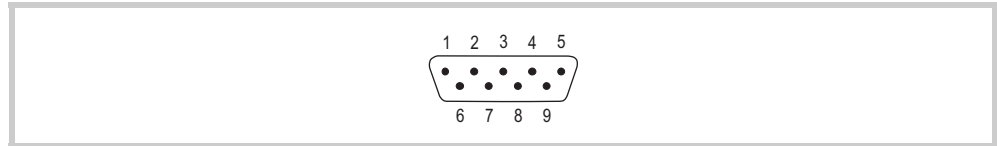


Fig. 13 RS232 interface (9-pin, D-Sub, male, UNC)

Pin	Signal	Assignment
1	DCD	Data Carrier Detected
2	RxD	Receive Data
3	TxD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Ground
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator


Tab. 14 Pin assignment of the RS232 interface

Wiring

- Shielded cables must be used.
- The maximum baud rate depends on the cable length:

Cable length	Max. baud rate
2.5 m	115200 Bit/s
5 m	57600 Bit/s
10 m	38400 Bit/s
15 m	19200 Bit/s
30 m	9600 Bit/s

Tab. 15 Relationship of cable length / baud rate

 **When preparing the cables, ensure that there is a low-resistance connection between the cable shield and the connector casing (→ Chapter 5.3.2, 29).**

5.3.5

Ethernet

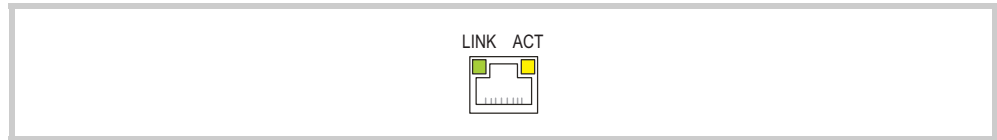


Fig. 14 Ethernet interface (RJ45 socket)

LED	Signal	Meaning
ACT (yellow)	flashes	Ethernet is active (data traffic)
LINK (green)	lit	Active network is connected and detected


Tab. 16 Control LEDs of the Ethernet interface

Cable

- Use shielded twisted pair cable (STP) for networking:
 - For device to device connection: crossover cable
 - For connecting to the hub/switch: 1:1 patch cable
- Maximum cable length: 100 m.

Ethernet interface in accordance with EIA/TIA 568 TSB-36.

CAUTION



Forces acting on the Ethernet interface

Communication can be disturbed and the connection mechanics damaged if the Ethernet interface is exposed to severe vibration or the RJ45 plug connection is pulled.

- ▶ Protect the RJ45 connection from severe vibration.
- ▶ Protect the RJ45 connection from pulling on the socket.

5 Installation

5.3 Cable preparation

5.3.6

USB Host

The USB Host interfaces support USB 2.0.




Fig. 15 USB Host interface (USB Host, type A)

Cable

- Only use shielded USB standard cable.
- Maximum cable length: 5 m.

5.3.7

PCI

The PCI interface complies with the PCI 2.1 standard.




Fig. 16 PCI interface (PCI 32 bit 2.1)

PCI expansion card

- Only use 3.3 V compatible PCI expansion cards.

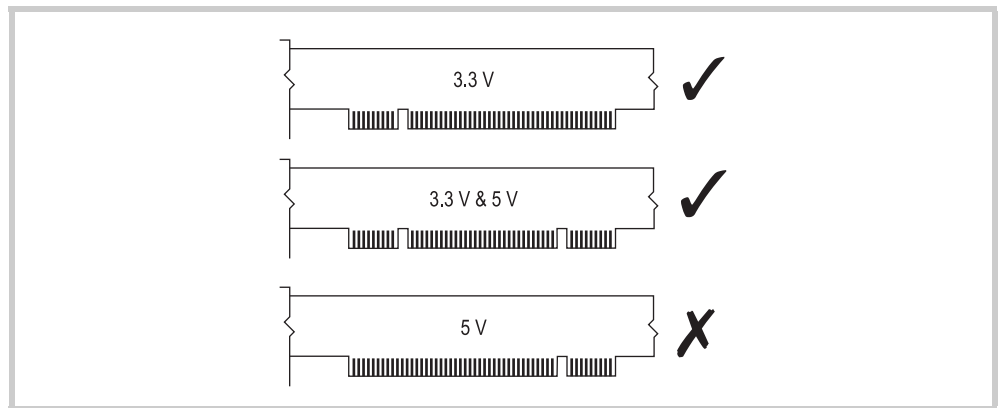


Fig. 17 Usable PCI expansion cards

- Power consumptions: max. 6.6 W (2 A).

5.3.8

VGA

The VGA interface can be used for connecting a monitor.




Fig. 18 VGA interface (15 pin, high-density D-Sub, female)

Cable

- Only use standard shielded VGA cable.
- Cable length: normally 5 m.

5.3.9

DVI

The Single Link DVI interface is only available with BOX devices (XP-702-...-BOX). The interface complies with the DVI-D standard and can be used for connecting a DVI monitor.





Fig. 19 DVI interface (DVI-D Single Link)

Cable

- Only use standard shielded DVI-D cable.
- Cable length: normally 5 m.

5.4 Preparing the device for operation

CAUTION	
	<p>Operational malfunctions</p> <p>Use of unsuitable or improperly prepared cables, as well as incorrect wiring will mean that neither the values stated in the technical data nor the electromagnetic compatibility (EMC) can be ensured.</p> <ul style="list-style-type: none">▶ Only use cables prepared by specialists.▶ The cables used must be prepared according to the interface description in this document.▶ The wiring instructions for the relevant interface must be observed when wiring the device.▶ Any generally applicable regulations and standards must be fulfilled.

CAUTION	
	<p>Device condensation</p> <p>If the device is or was exposed to climatic changes (temperature fluctuation, air humidity) moisture can form on or in the device (device condensation). In this case, there is a risk of short-circuit.</p> <ul style="list-style-type: none">▶ The device must not be switched on when device condensation is present.▶ If condensation is present on the device, or if it was exposed to temperature fluctuations, it must be allowed to adjust to room temperature (do not expose the device to the direct heat of heating devices) prior to commissioning.

 **Required depending on device version and operating system used:**


- CF card with operating system (for Windows XPe)
- Hard disk with operating system (for Windows XP)
- Active cooling unit (for 1.8 GHz devices (XP-702-D...))

1 Check the device for damage in transit.

 **The device must only be installed and commissioned in perfect technical condition and in compliance with this document.**

- 2 If required, fit the required PCI expansion card in the device. See Chapter 5.4.1 Fitting a PCI expansion card in the device, [38](#).
- 3 Fit the mass storage memory (CF cards and/or hard disk) in the device:
 - Fitting the CF card, see Chapter 5.4.2, [40](#).
 - Fitting the hard disk, see Chapter 5.4.3, [42](#).
- 4 With 1.8 GHz devices (XP-702-D...), fit an active cooling unit to the rear of the device. See Chapter 5.4.4 Mounting the active cooling unit, [44](#).
- 5 Mount the device in the control cabinet, control panel or the control desk (BOX devices only in control cabinets):
 - Devices with display, see Chapter 5.4.5 Mounting a device with a display, [45](#).
 - BOX devices, see Chapter 5.4.6 Mounting a BOX device, [50](#).

6 Connect the device as required.

- Follow the instructions on wiring the relevant interface. See Chapter 5.3 Cable preparation,  27.



The device is not provided with an On/Off switch. If the power supply is not provided with a switch, the device will start up (boot) as soon as it is connected to the power supply.

5 Installation

5.4 Preparing the device for operation

5.4.1

Fitting a PCI expansion card in the device

- 1 Remove the mounting screw (A) of the PCI card slot cover.

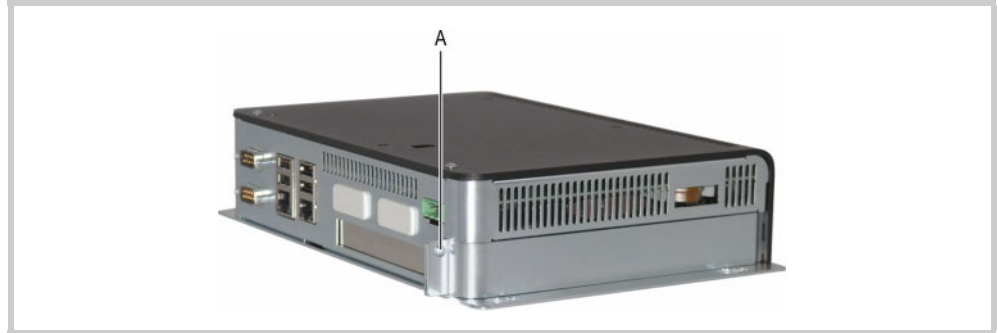


Fig. 20 Removing the mounting screw (A)

- 2 Remove the side cover.



Fig. 21 Removing the side cover

- 3 Remove the PCI card slot cover.
 - Keep the PCI cardslot cover.



Fig. 22 Removing the PCI card slot cover

- 4 Slide the PCI expansion card along the housing wall into the PCI card slot:
 - The tab of the front plate of the PCI expansion card must be inserted in the recess provided for it on the device housing.
 - The PCI contacts of the expansion card must be pushed all the way into the PCI interface of the device.



Fig. 23 Inserting the PCI expansion card

- 5 Slide the two tabs of the side cover into the recesses provided for them in the device housing.



Fig. 24 Positioning the side cover

- 6 Fasten the PCI expansion card and the side cover on the device using the mounting screw (A).

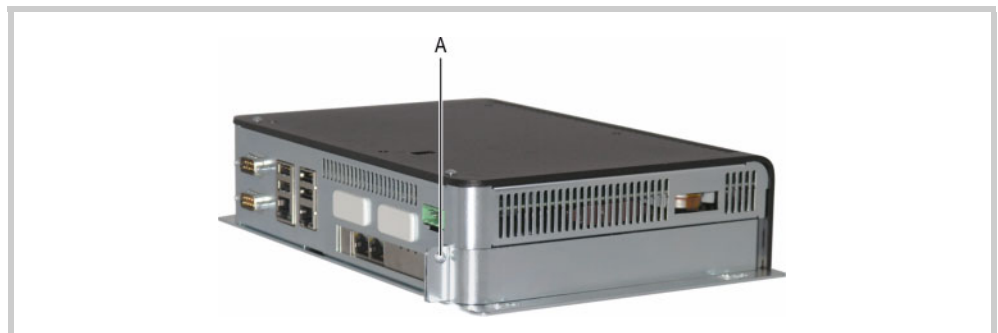


Fig. 25 Fastening the PCI expansion card and the side cover

5 Installation

5.4 Preparing the device for operation

5.4.2

Inserting and removing a CF card

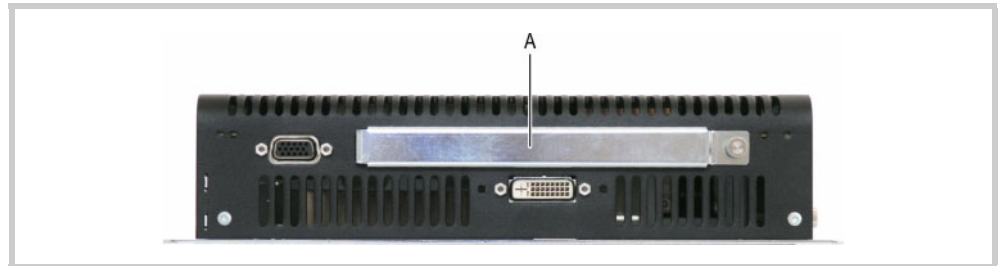


Fig. 26 Service side of the device (CF slot cover fitted)

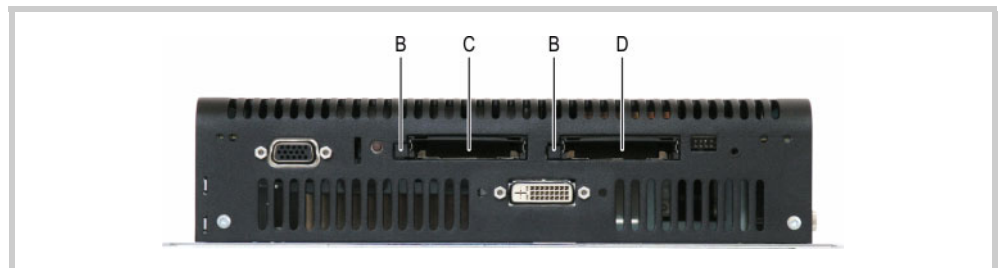


Fig. 27 Service side of the device (CF slot cover removed)

CAUTION



Data loss

During a write operation to a CF card/hard disk, this may lose data or may be destroyed if there is a power failure or if it is removed.

- ▶ Only insert and remove CF cards/hard disk when the device is in a de-energized state.
- ▶ Always secure CF cards with the CF slot cover.
- ▶ Before switching off:
 - Ensure that no software write operations to a CF card/hard disk are in progress («CF ACT» and «HD ACT» LEDs must not be lit).
 - Shut down the operating system.
- ▶ If possible, avoid write operations to CF cards/hard disk. Reasons:
 - The number of write cycles possible on CF cards is limited.
 - A power failure during write operations will most likely lead to loss of data.
- ▶ If the writing of the CF card/hard disk cannot be avoided, use an uninterruptible power supply (USP) to prevent data loss.



Do not apply any force (CF cards are protected against reverse insertion).

Inserting a CF card

- 1 Remove the CF slot cover (A).
- 2 Push the CF card all the way into the CF slot:
 - CF card with operating system in CF slot 0 (C)
 - CF card with data in CF slot 1 (D)
- 3 Fit the CF slot cover (A).

Removing a CF card


- 1 Remove the CF slot cover (A).
- 2 Fully press in the ejector button (B) of the CF slot containing the CF card to be removed.
 - This will cause the CF card to come out of the CF slot slightly.
- 3 Pull the CF card out of the CF slot.
- 4 Fit the CF slot cover (A).

5 Installation

5.4 Preparing the device for operation

5.4.3

Fitting a hard disk in the device

CAUTION	
	<p>Data loss</p> <p>During a write operation to a CF card/hard disk, this may lose data or may be destroyed if there is a power failure or if it is removed.</p> <ul style="list-style-type: none">▶ Only insert and remove CF cards/hard disk when the device is in a de-energized state.▶ Always secure CF cards with the CF slot cover.▶ Before switching off:<ul style="list-style-type: none">- Ensure that no software write operations to a CF card/hard disk are in progress («CF ACT» and «HD ACT» LEDs must not be lit).- Shut down the operating system.▶ If possible, avoid write operations to CF cards/hard disk. Reasons:<ul style="list-style-type: none">- The number of write cycles possible on CF cards is limited.- A power failure during write operations will most likely lead to loss of data.▶ If the writing of the CF card/hard disk cannot be avoided, use an uninterruptible power supply (USP) to prevent data loss.

- 1 Remove the hard disk slot cover (A).
 - Keep the hard disk slot cover.

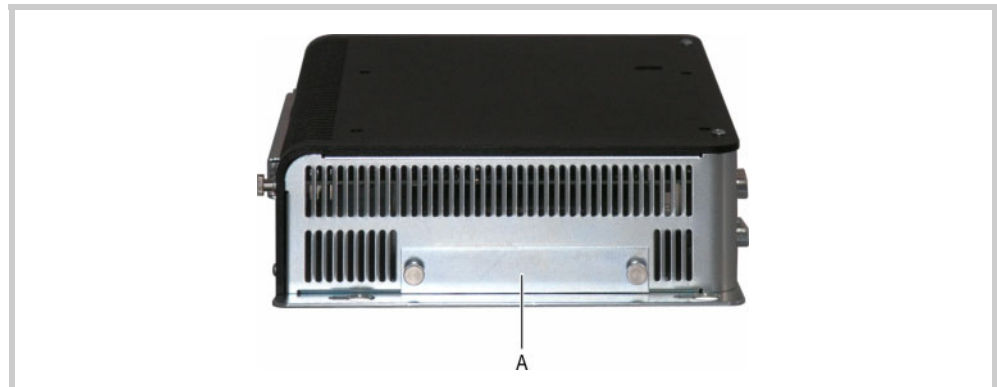



Fig. 28 Hard disk slot cover (A)

- 2 Insert the hard disk into the hard disk slot.

 **Do not apply force (hard disk is protected against incorrect insertion).**

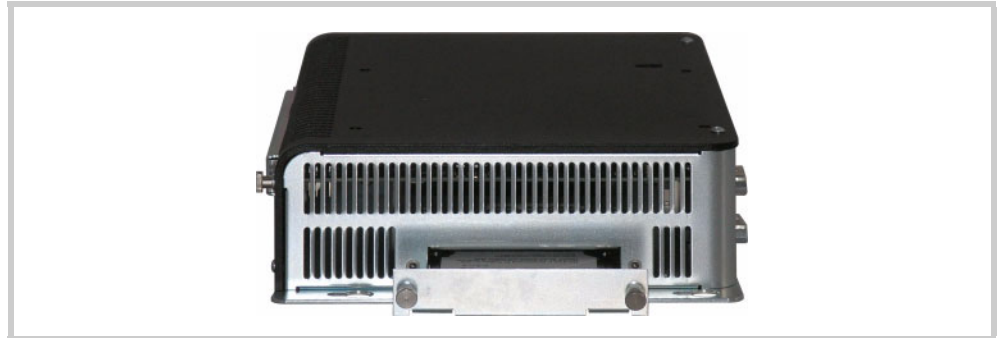


Fig. 29 Inserting a hard disk into the hard disk slot

- 3 Fasten the hard disk module with the two knurled screws.

5 Installation

5.4 Preparing the device for operation

5.4.4

Mounting the active cooling unit

- 1 Connect the power supply for the active cooling unit on the device.



Fig. 30 Power supply for the active cooling unit connected

- 2 Position the active cooling unit on the device so that the expanding rivets are located on the device mounting holes provided for this.



Fig. 31 Active cooling unit positioned

- 3 Push the four expanding rivets into the mounting holes.




Fig. 32 Active cooling unit mounted

5.4.5

Mounting a device with a display

 **An additional set of retaining brackets is required for mounting in accordance with IP65 and for use in potentially explosive atmospheres. Please contact your supplier.**

- 1 Select the mounting position of the device as described in Chapter 5.2.1 Requirements for the mounting position,  26.
- 2 Prepare a mounting cutout for the device at the selected position:
 - Mounting cutout:
 - 8.4" devices: 261 × 194 mm (±1 mm)
 - 10.4" devices: 329 × 238 mm (±1 mm)
 - 12.1" devices: 344 × 262 mm (±1 mm)
 - 15" devices: 410 × 315 mm (±1 mm)
 - Material thickness at the mounting cutout 2...5 mm

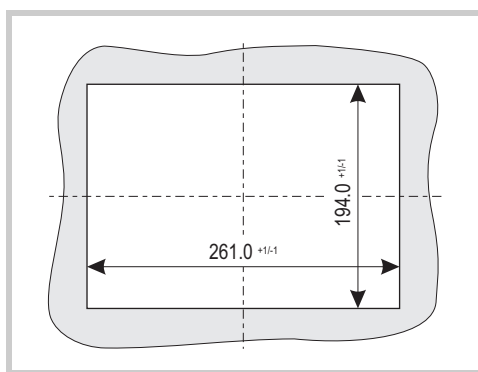


Fig. 33 Mounting cutout for 8.4" devices

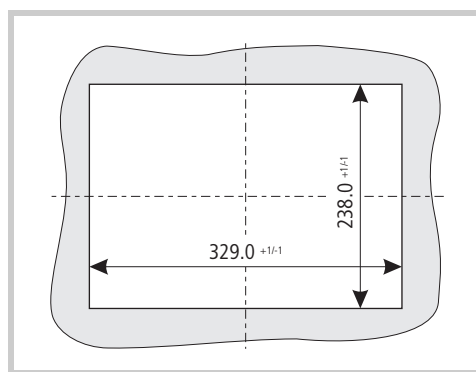


Fig. 34 Mounting cutout for 10.4" devices

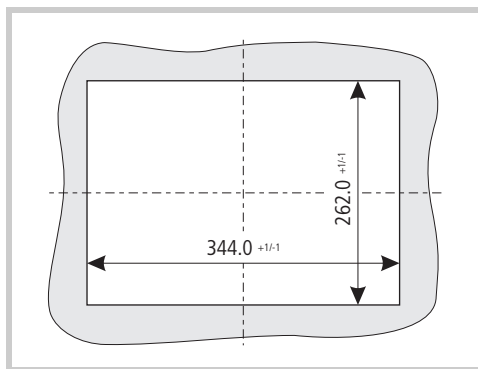


Fig. 35 Mounting cutout for 12.1" devices

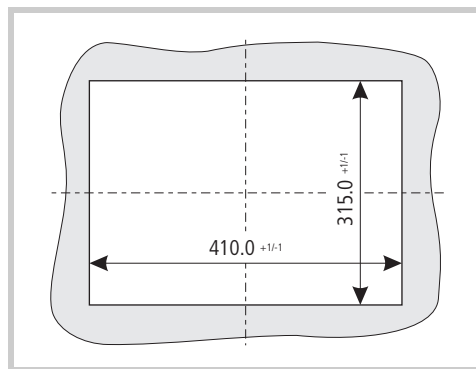



Fig. 36 Mounting cutout for 15" devices

5 Installation

5.4 Preparing the device for operation

- 3 Insert the sealing strip supplied in the groove (A) on the rear of the device front plate and cut it so that the join is tight.

CAUTION	
	<p>Poor sealing</p> <p>Poor sealing resulting from the twisting of the sealing strip or due to a gap between the ends of the sealing strip.</p> <ul style="list-style-type: none">▶ The join of the sealing strip must be positioned on the bottom of the device.▶ Do not twist the sealing strip when it is inserted.▶ Cut the sealing strip to a suitable length so that the join is tight.

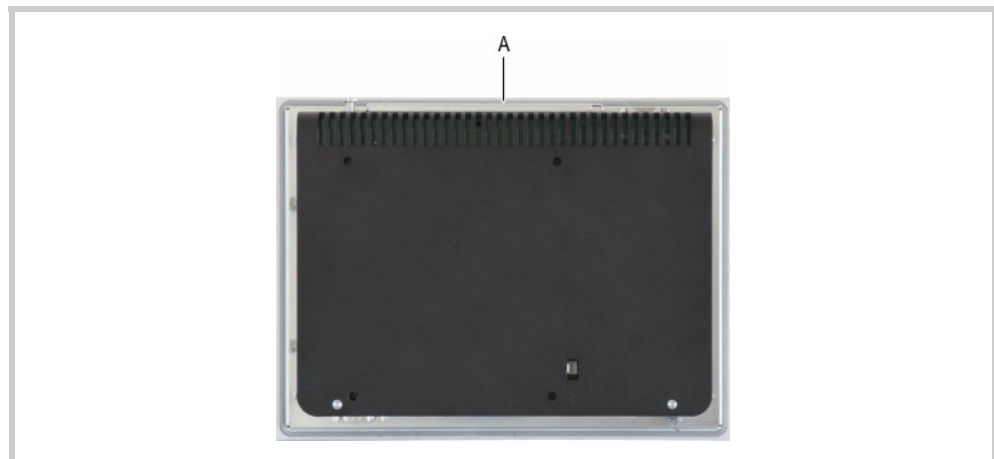



Fig. 37 Groove for sealing strip (A)


- 4 Fit the supplied threaded pins in the retaining brackets beforehand.



Fig. 38 Threaded pin pre-fitted in a retaining bracket

- 5 Fit the device from the front into the mounting cutout.
- 6 Clip on the retaining brackets in the recesses provided for them on the device as shown below and fix the device by tightening the threaded pins until the front of the MICRO PANEL is flush with the surface of the control cabinet.

CAUTION	
	<p>Mechanical damage to the device</p> <p>Tightening the threaded pins too tightly may damage the device.</p> <ul style="list-style-type: none">▶ Tighten threaded pins with a max. tightening torque of 0.2 Nm.

-  **The positions of the retaining brackets depend on:**
- the size of the device and
 - the mounting requirements.

- 8.4" devices (standard mounting):
 - Top and bottom of the device:
Fit one retaining bracket each at the left and right fixing position



Fig. 39 8.4" devices with four retaining brackets (do not meet IP65 requirements)

- 8.4" devices which must be mounted in accordance with IP65 or used in potentially explosive atmospheres:
 - Top and bottom of the device:
Fit one retaining bracket each at the left and right fixing position
 - Left and right on the device:
One retaining bracket each at the top and bottom fixing position

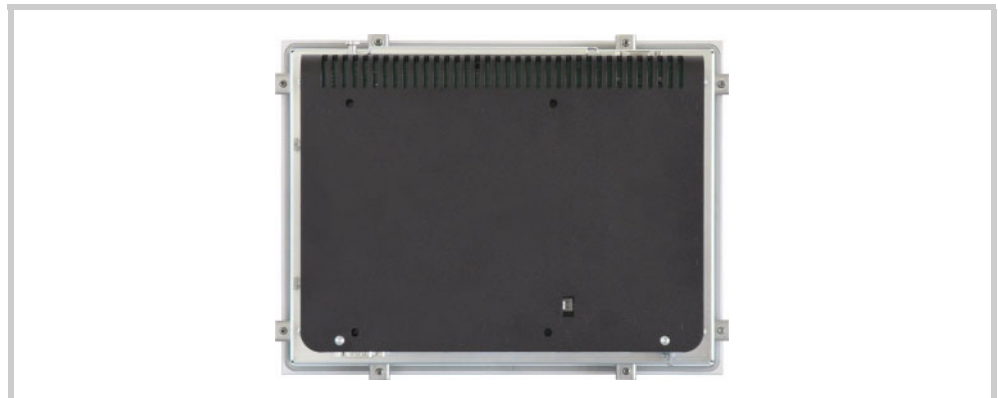


Fig. 40 8.4" devices with eight retaining brackets (meet IP65 requirements)

5 Installation

5.4 Preparing the device for operation

- 10.4" and 12.1" devices (standard mounting):
 - Top and bottom of the device:
One retaining bracket each at the central fixing position
 - Left and right on the device:
One retaining bracket each at the top and bottom fixing position

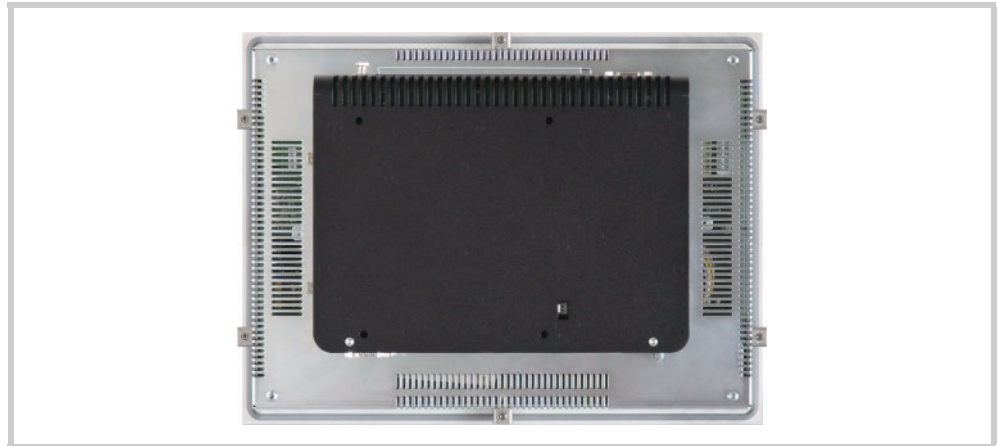


Fig. 41 10.4" and 12.1" devices with six retaining brackets (do not meet IP65 requirements)

- 10.4" and 12.1" devices which must be mounted in accordance with IP65 or used in potentially explosive atmospheres:
 - Top and bottom of the device:
One retaining bracket each at the outermost fixing position on the left and on the right, and at the central fixing position
 - Left and right on the device:
One retaining bracket each at the central fixing position

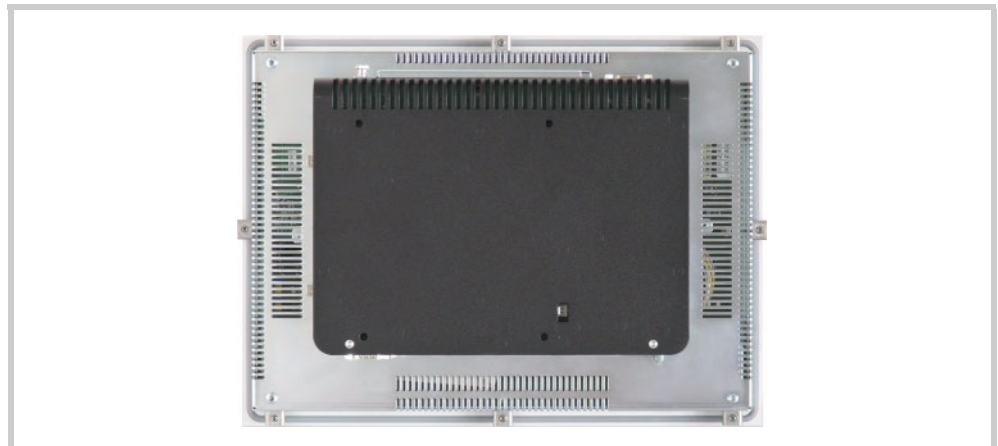


Fig. 42 10.4" and 12.1" devices with eight retaining brackets (meet IP65 requirements)

- 15" devices (standard mounting):
 - Top and bottom of the device:
One retaining bracket each at the second fixing position from the left and from the right
 - Left and right on the device:
One retaining bracket each at the top and bottom fixing position

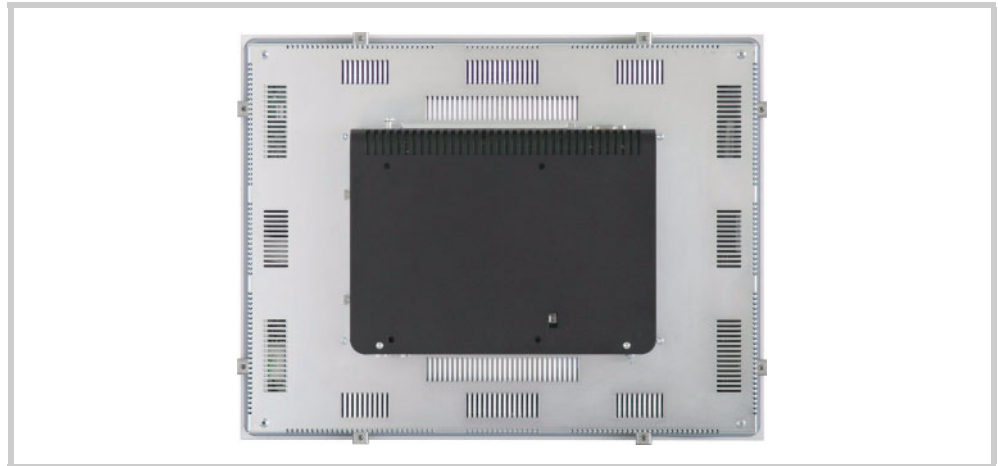


Fig. 43 15" devices with eight retaining brackets (do not meet IP65 requirements)

- 15" devices which must be mounted in accordance with IP65 or used in potentially explosive atmospheres:
 - Top and bottom of the device:
One retaining bracket each at the outermost and at the two innermost fixing positions
 - Left and right on the device:
One retaining bracket each at the two innermost fixing positions

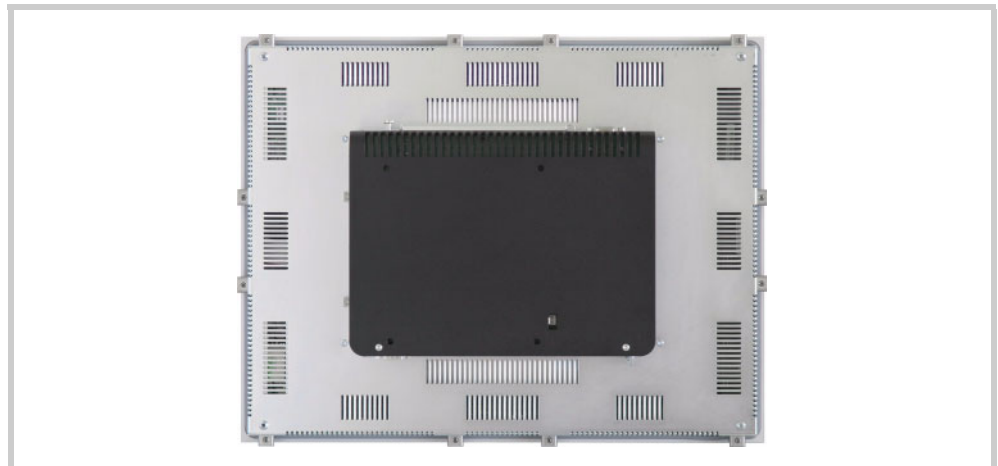


Fig. 44 15" devices with twelve retaining brackets (meet IP65 requirements)

5 Installation

5.4 Preparing the device for operation

5.4.6

Mounting a BOX device

- 1 Select the mounting position of the device in the control cabinet as described in Chapter 5.2.1 Requirements for the mounting position, 26.
- 2 Mount the device at the appropriate position.

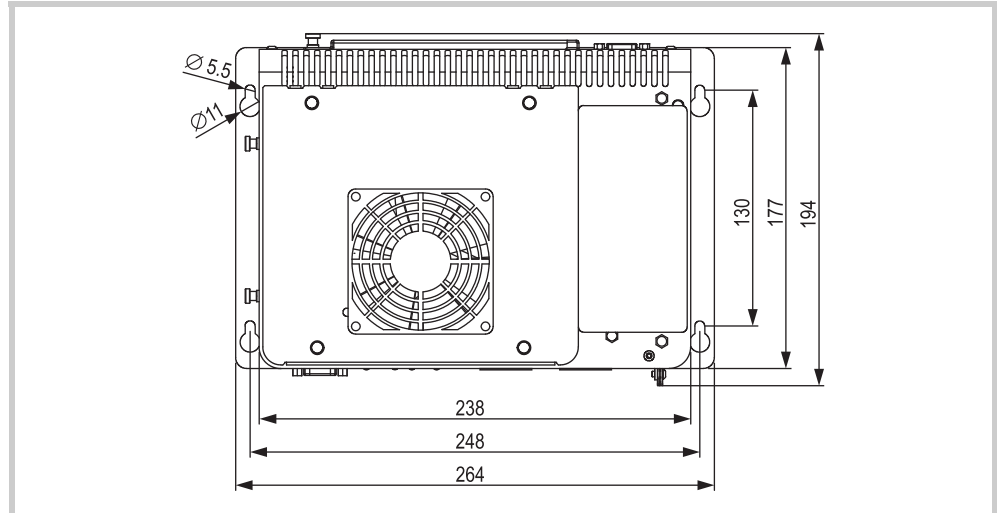


Fig. 45 BOX device with active cooling unit (view from rear)

6 Operation

6.1 Safety regulations

 Read Chapter 3 Safety regulations, 15 before working with the device. This contains important information for your personal safety.

CAUTION



Device condensation

If the device is or was exposed to climatic changes (temperature fluctuation, air humidity) moisture can form on or in the device (device condensation). In this case, there is a risk of short-circuit.

- ▶ The device must **not** be switched on when device condensation is present.
- ▶ If condensation is present on the device, or if it was exposed to temperature fluctuations, it must be allowed to adjust to room temperature (do not expose the device to the direct heat of heating devices) prior to commissioning.

6 Operation

6.2 Starting the device


6.2

Starting the device

Requirement:

- The CF card with the operating system is located in the CF slot 0
- or the hard disk with the operating system is mounted in the device.

Procedure:

- 1 Energize the device.
 - The device will boot.
- 2 If the device does not boot up and/or if an error message appears while starting (booting) the device, see Chapter 7.4 Troubleshooting,  59.
- 3 Complete the following steps after initial commissioning (→ Document «MN05010008Z-EN System Description Windows XP/XPe»):
 - 3.1 Adjust the system settings of the device.
 - 3.2 Install the required application programs.

6.3

Switching off the device



Frequent on/off switching of the device, especially at low temperatures, will reduce the lifespan of the cold cathode tubes (CCFL) of the backlight.

- **Avoid frequent on/off switching of the device.**

- 1 Shut down the operating system.
- 2 De-energize the device.



To switch on the device again, it must be de-energized and can only be switched on again after a pause of 20 seconds.

7 Maintenance and service

7.1 Safety regulations



Read Chapter 3 Safety regulations, 15 before working with the device. This contains important information for your personal safety.

7 Maintenance and service

7.2 Maintenance

7.2

Maintenance

The infra-red frame on devices with infra-red touch must be cleaned regularly (see Chapter 7.2.1 Cleaning the infra-red touch, 54). Otherwise these devices are maintenance-free.

7.2.1

Cleaning the infra-red touch

The infra-red frame must be cleaned regularly.



The infra-red touch needs to be cleaned if the following is indicated:

■ On the taskbar of the display, one of the following icons will appear:



: Contaminated touch sensor



: Faulty or severely contaminated touch sensor

■ A visualization application will show an appropriate warning.

The infra-red channels may be interrupted if the infra-red frame is severely contaminated. In extreme cases, this may mean that the affected zones of the touch sensor cannot be touch activated.

CAUTION



Cleaning the device

Damage to the device due to the use of pointed or sharp objects or by liquids.

- ▶ Do not use any pointed or sharp objects (e.g. knife) for cleaning.
- ▶ Do not use any aggressive or abrasive cleaning agent or solvent.
- ▶ Avoid any liquid entering the device (risk of short-circuit).

1 Clean the infra-red frame and the display with a clean, soft, damp cloth.

- With stubborn contamination, spray a little cleaning agent onto the damp cloth first.

7.2.2

Recalibrating the infra-red touch

Devices with infra-red touch do not have to be recalibrated.

7.2.3

Replacing the battery

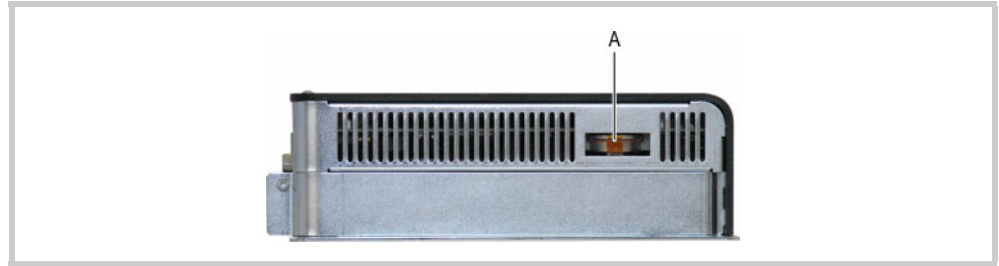


Fig. 46 Battery (A)

- 1 Remove the battery from the opening in the device housing by pulling on the tab.
- 2 Insert a new battery into the device.
 - Battery type, see Chapter 9.4 System, [71](#).
- 3 Reset the date and time of the device.

7 Maintenance and service

7.3 Service

7.3

Service

7.3.1

Repairs

The device must only be opened by the manufacturer or by an authorized repair center.

Contact your local supplier or Eaton technical support for repairs.

Only the original packaging should be used for transporting the device.

7.3.2

Replacing the active cooling unit

- 1 Undo the fixing of the active cooling unit by pulling on the heads of the expanding rivets.



Fig. 47 Undoing the fastening for the active cooling unit

- 2 Pull the power supply connector from the active cooling unit.



Fig. 48 Connector for the power supply of the active cooling unit

- 3 Connect the power supply of the new active cooling unit on the device.

7 Maintenance and service

7.3 Service

- 4 Position the active cooling unit on the device so that the expanding rivets are located on the device mounting holes provided for this.



Fig. 49 Active cooling unit positioned


- 5 Push the four expanding rivets into the mounting holes.



Fig. 50 Active cooling unit mounted

7.4

Troubleshooting

Fault and possible cause	Corrective action
Device does not start (boot).	
Power supply interface does not have any power.	Check the power supply cable.
The device was not de-energized after shut down.	De-energize the device for at least 20 s after shutdown.
While the device is starting (booting), the following message appears:	
«Reboot and select proper boot device...»	
There is no CF card/hard disk with operating system in the CF slot 0/hard disk slot.	Insert the CF card/hard disk with the operating system in the CF slot 0/hard disk slot.
CF card/hard disk in CF slot 0/hard disk slot is not bootable.	Replace the CF card/hard disk with the operating system in CF slot 0/hard disk slot.
A bootable USB mass storage memory without an operating system is connected to the device.	Remove the USB mass storage memory.
Display remains or becomes dark.	
Backlight is faulty.	Send in your device for repair.
BIOS setup lost or BIOS incorrectly set.	Send in your device for repair.
Second display remains black when the device is started (booted).	
Second display is deactivated.	Activate the second display (→ Chapter 7.4.1, 60).
Touch does not react or does not react correctly to touch operation.	
Infra-red frame of the infra-red touch is contaminated.	Clean the infra-red frame (→ Chapter 7.2.1, 54).
Touch controller is faulty.	Send in your device for repair.
The icon  appears in the taskbar.	
Incorrect operation of the operating elements on the display.	Remove all objects from the area of the display.
Infra-red frame of the infra-red touch is contaminated.	Clean the infra-red frame (→ Chapter 7.2.1, 54).
The threaded pins for mounting the device have been tightened too much.	Loosen the threaded pins (observe max. torque, → Chapter 5.4.5, 45).
Device is faulty.	Send in your device for repair.

7 Maintenance and service

7.4 Troubleshooting

Fault and possible cause	Corrective action
Date/time is incorrect.	
Battery is empty/faulty.	<ul style="list-style-type: none">■ Replace battery (→ Chapter 7.2.3, 55).■ Set date and time.
«SUPPLY ERR» LED lit.	
Device is faulty.	Send in your device for repair.

Tab. 17 Troubleshooting

7.4.1

Activate the second display

If the device is started while the second display is **not** connected, in the device the setting «Single Display» is set. To activate the second display again, act as follows:

- 1 Connect a USB mouse to a USB interface of the device.
- 2 Energize the device.
 - The device will boot.
 - One display is booted up.
- 3 On the desktop of the display booted, click the right mouse key.
- 4 In the context menu, click [Graphics Properties].

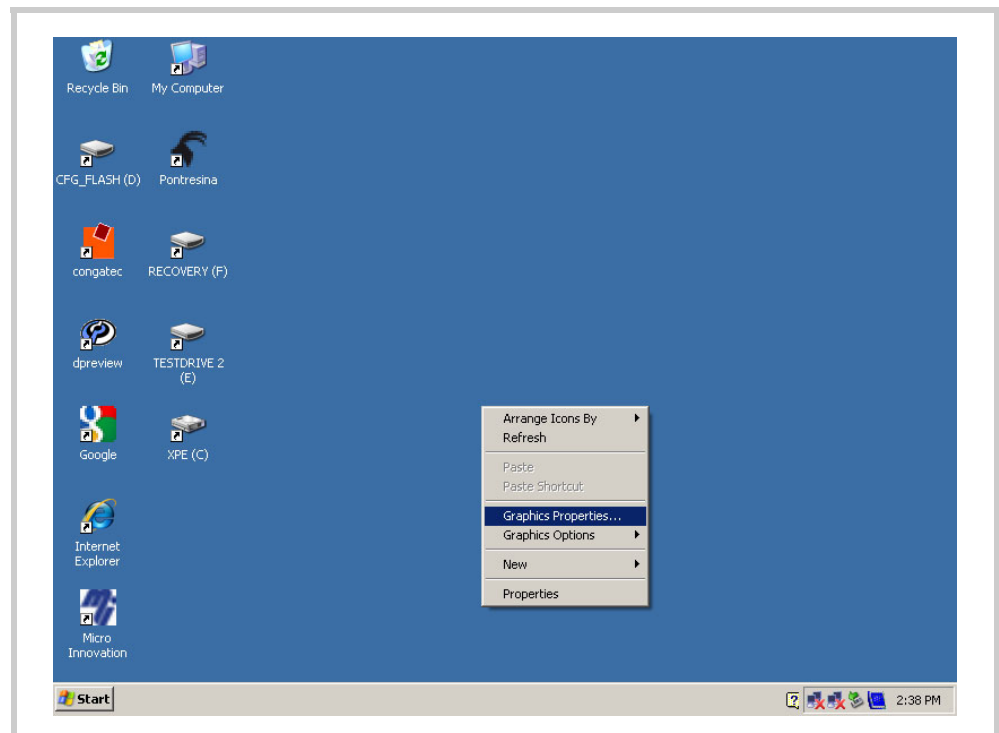


Fig. 51 [Graphics Properties] in the context menu

- The window «Monitor and Digital Display» appears.

- 5 Under «Multiple Display», select «Intel(R) Dual Display Clone».

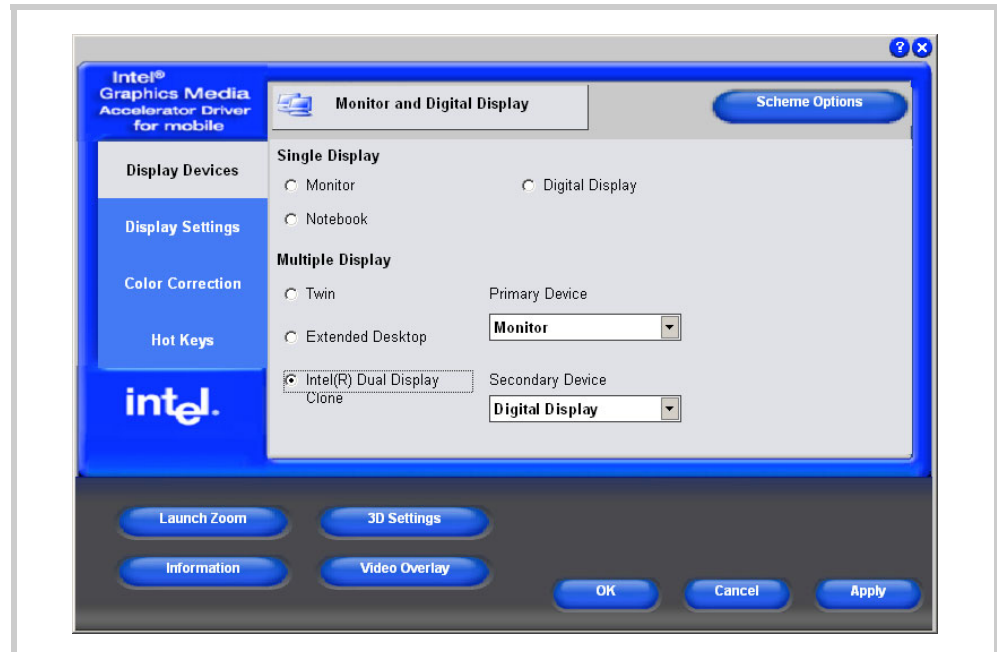


Fig. 52 Window «Monitor and Digital Display»

- 6 Click [OK].
- In the second display, it appears the same as in the first display.
 - The window «Confirm the Desktop Change» appears.

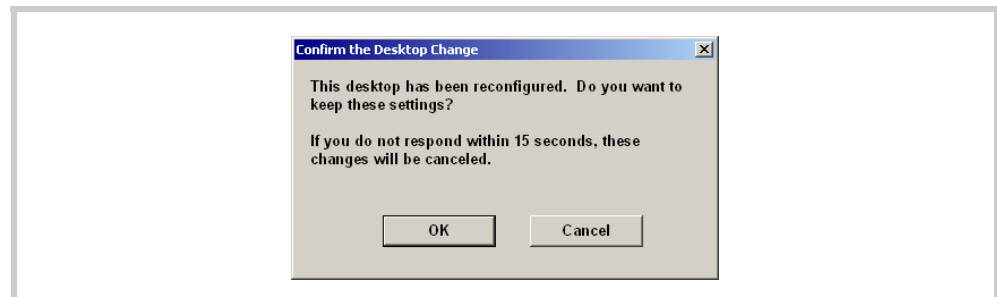


Fig. 53 Window «Confirm the Desktop Change»

- 7 Click [OK].

7 Maintenance and service

7.4 Troubleshooting

8 Storage, transport and disposal

8.1 Safety regulations



Read Chapter 3 Safety regulations, 15 before installing and commissioning the device. This contains important information for your personal safety.

8.2 Storage

The ambient conditions for storage must be fulfilled. See Chapter 9.9 Ambient conditions, 78.

8.3 Transport

Damage to the device must be prevented during transport (use an appropriate packaging).

The ambient conditions must be fulfilled even when the device is transported. See Chapter 9.9 Ambient conditions, 78.

- 1 Check the device on arrival for damage in transit.


8 Storage, transport and disposal

8.4 Disposal

8.4

Disposal

⚠ DANGER



Explosive and toxic materials

Any improper handling causes a risk of explosion due to the lithium battery soldered in the device and a risk of poisoning due to the mercury content of the cold cathode tubes.

▶ Dispose of the device properly.

Devices that are no longer used must be properly disposed of in accordance with the applicable national regulations or returned to the manufacturer or sales office.

Materials used in the device

Component	Material
Housing	Galvanized sheet steel and power-coated aluminum
Front plate	Aluminum, Peraluman 101 anodized
Infra-red frame	Polycarbonate (PC)
Infra-red touch protective panel	Glass
Cold cathode tubes	Mercury (< 5 mg)
Battery	Lithium
Electronic components	Various

Tab. 18 Materials used in the device

Materials used in the packaging

Packaging	Material
External packaging	Cardboard
Internal packaging	<ul style="list-style-type: none">■ Closed-cell polyethylene foam, CFC-free■ Plastic bag: Polyethylene (PE)

Tab. 19 Materials used in the packaging

9 Technical data

9.1 Dimensions and weights

9.1.1 BOX devices

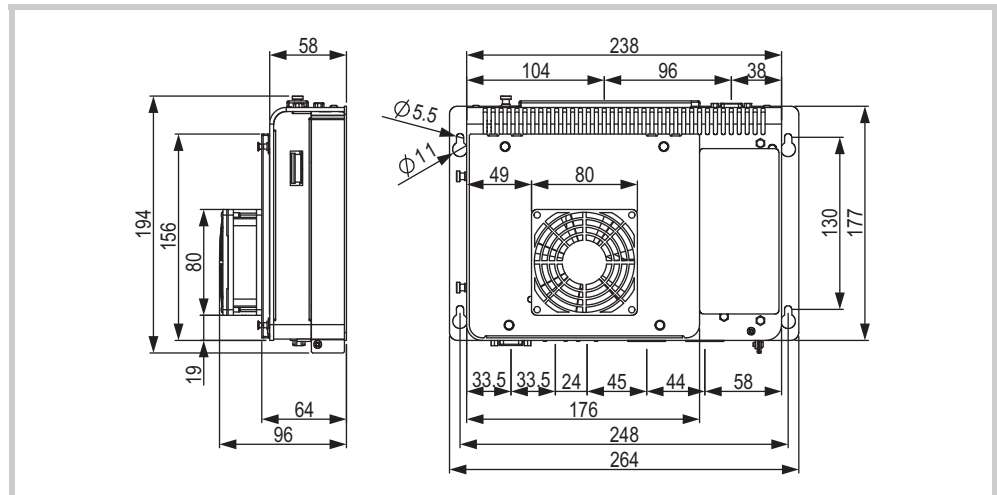


Fig. 54 Mechanical dimensions of the BOX devices in mm

Property	XP-702 BOX
Height	194 mm
Width	264 mm
Depth	
Devices without active cooling unit	58 mm
Devices with active cooling unit	96 mm
Weight	
Devices without active cooling unit	Approx. 1.9 kg
Devices with active cooling unit	Approx. 2.3 kg

Tab. 20 Dimensions and weights of the BOX devices

9 Technical data

9.1 Dimensions and weights

9.1.2

8.4" devices

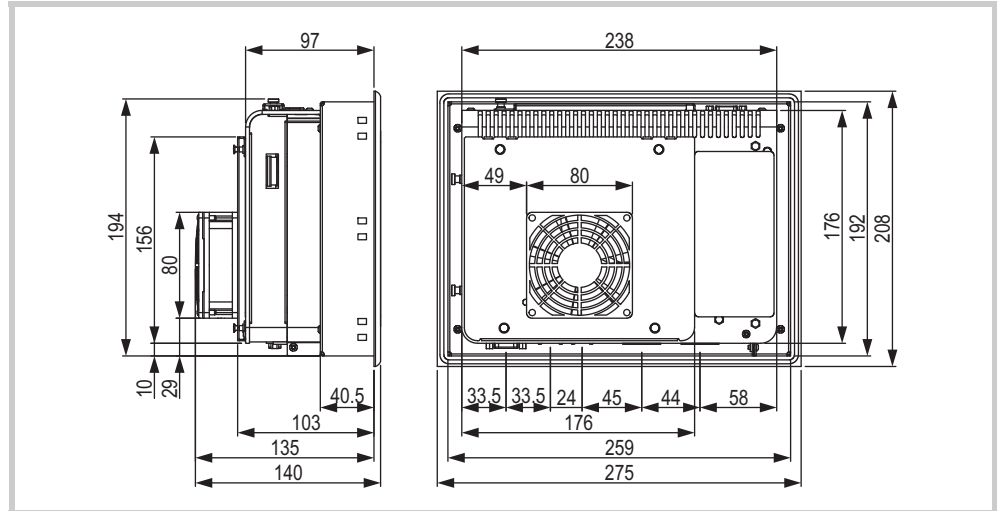


Fig. 55 Mechanical dimensions of the 8.4" devices in mm

Property	XP-702 8.4"
Height	208 mm
Width	275 mm
Depth incl. front plate	
Devices without active cooling unit	102 mm
Devices with active cooling unit	140 mm
Thickness of front plate	5 mm
Mounting depth	
Devices without active cooling unit	97 mm
Devices with active cooling unit	135 mm
Mounting cutout	261 mm × 194 mm (±1 mm)
Weight	
Devices without active cooling unit	Approx. 3.2 kg
Devices with active cooling unit	Approx. 3.6 kg

Tab. 21 Dimensions and weights of the 8.4" devices

9.1.3

10.4" devices

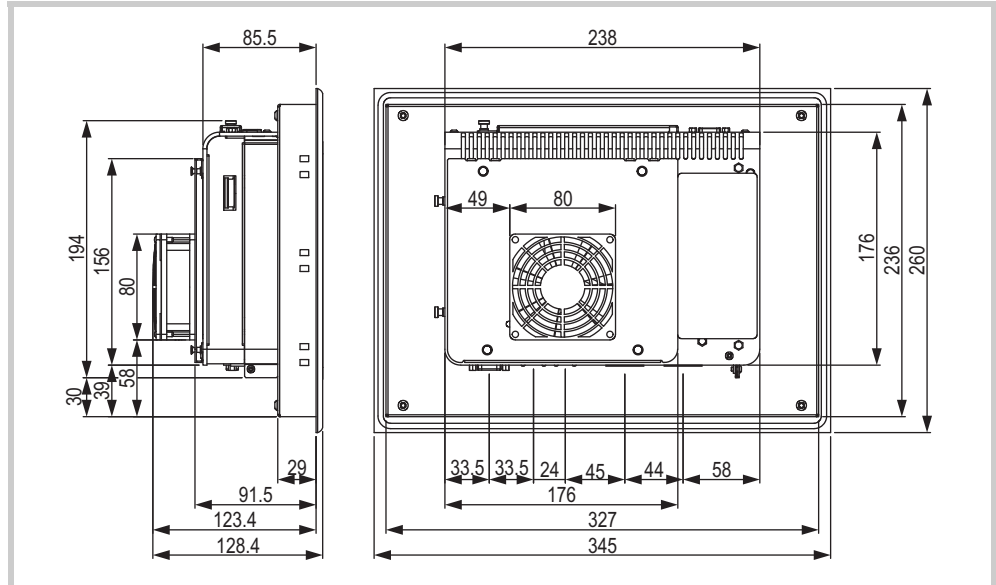


Fig. 56 Mechanical dimensions of the 10.4" devices in mm

Property	XP-702 10.4"
Height	260 mm
Width	345 mm
Depth incl. front plate	
Devices without active cooling unit	90.5 mm
Devices with active cooling unit	128.5 mm
Thickness of front plate	5 mm
Mounting depth	
Devices without active cooling unit	85.5 mm
Devices with active cooling unit	123.5 mm
Mounting cutout	329 × 238 mm (±1 mm)
Weight	
Devices without active cooling unit	Approx. 4.1 kg
Devices with active cooling unit	Approx. 4.5 kg

Tab. 22 Dimensions and weights of the 10.4" devices

9 Technical data

9.1 Dimensions and weights

9.1.4

12.1" devices

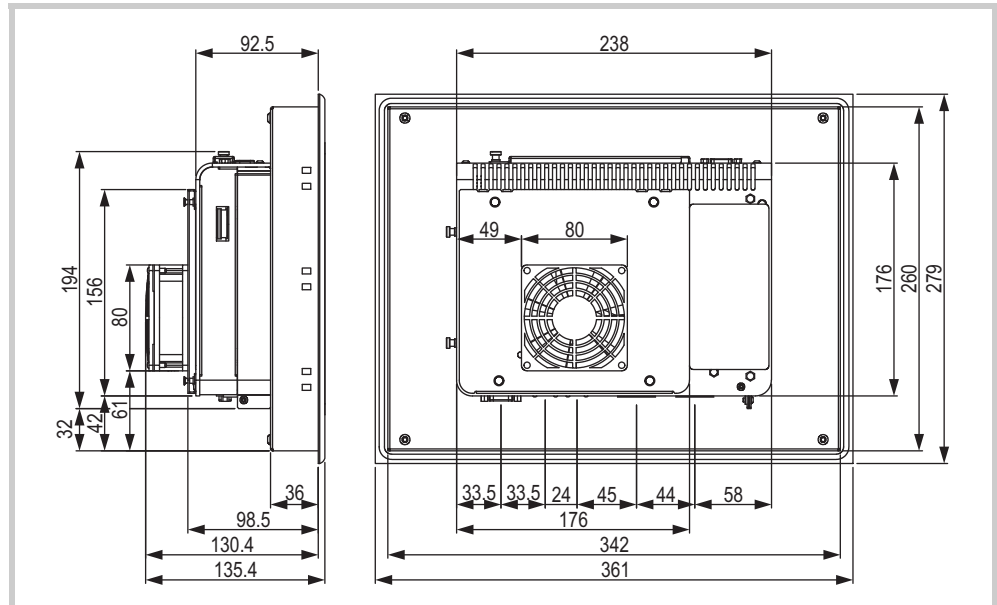


Fig. 57 Mechanical dimensions of the 12.1" devices in mm

Property	XP-702 12.1"
Height	279 mm
Width	361 mm
Depth incl. front plate	
Devices without active cooling unit	97.5 mm
Devices with active cooling unit	135.5 mm
Thickness of front plate	5 mm
Mounting depth	
Devices without active cooling unit	92.5 mm
Devices with active cooling unit	130.5 mm
Mounting cutout	344 × 262 mm (±1 mm)
Weight	
Devices without active cooling unit	Approx. 4.7 kg
Devices with active cooling unit	Approx. 5.1 kg

Tab. 23 Dimensions and weights of the 12.1" devices

9.1.5

15" devices

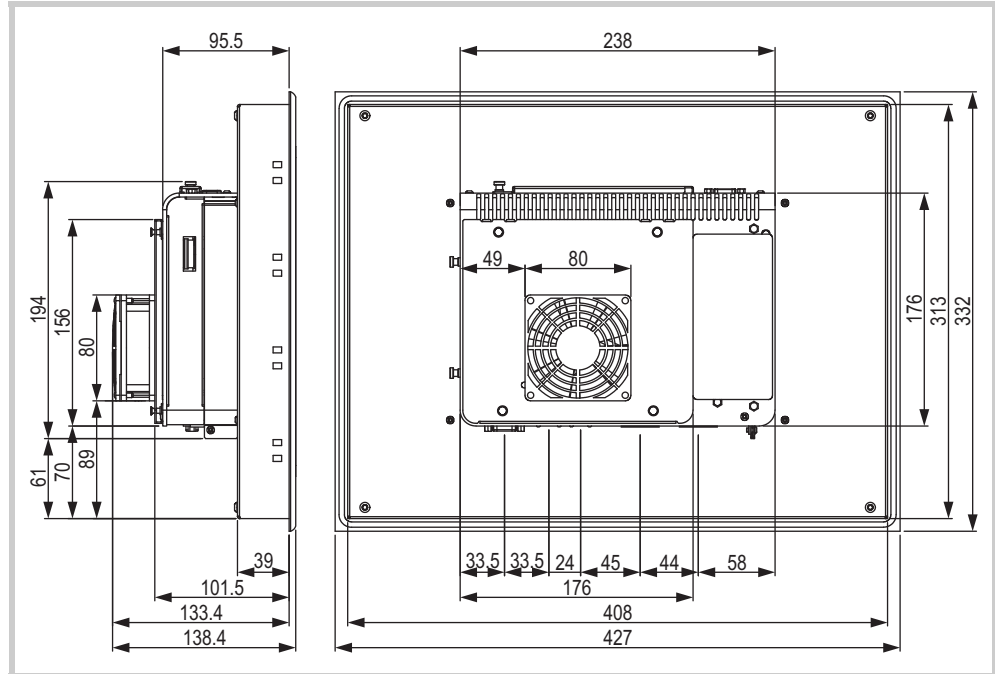


Fig. 58 Mechanical dimensions of the 15" devices in mm

Property	XP-702 15"
Height	332 mm
Width	427 mm
Depth incl. front plate	
Devices without active cooling unit	100.5 mm
Devices with active cooling unit	138.5 mm
Thickness of front plate	5 mm
Mounting depth	
Devices without active cooling unit	95.5 mm
Devices with active cooling unit	133.5 mm
Mounting cutout	410 mm × 315 mm (±1 mm)
Weight	
Devices without active cooling unit	Approx. 6.3 kg
Devices with active cooling unit	Approx. 6.7 kg

Tab. 24 Dimensions and weights of the 15" devices

9.2

Display

Property	XP-702 8.4"/10.4"/12.1"/15"
Type	TFT-LCD (color)
Resolution (W × H)	
SVGA devices:	SVGA (800 × 600 pixels)
■ XP-702-...-84TSI	
■ XP-702-...-10TSI	
XGA devices:	XGA (1024 × 768 pixels)
■ XP-702-...-12TXI	
■ XP-702-...-15TXI	
Visible display area	
8.4" devices	170 mm × 128 mm (8.4" screen diagonal)
10.4" devices	211 mm × 158 mm (10.4" screen diagonal)
12.1" devices	246 mm × 185 mm (12.1" screen diagonal)
15" devices	304 mm × 228 mm (15" screen diagonal)
Color resolution	Adjustable: 16.7 mill., 64 k or 256 colors
Contrast ratio	Normally 400:1
Brightness	Normally 400 cd/m ²
Backlight	
Technology	
8.4", 10.4" and 12.1" devices	2× CCFL
15" devices	4× CCFL
Lifespan	Normally 50 000 h
Infra-red touch protective panel	Non-reflective safety glass

Tab. 25 Display

9.3

Touch sensor

Property	XP-702 8.4"/10.4"/12.1"/15"
Type	Infra-red touch
Resolution	
8.4" devices	63 × 47 logic channels
10.4" devices	79 × 59 logic channels
12.1" devices	95 × 71 logic channels
15" devices	107 × 83 logic channels

Tab. 26 Touch sensor of the devices with infra-red touch

9.4


System

Property	XP-702
Processor, depending on the device version:	
Devices with 1 GHz (XP-702-C...)	X86 Celeron M, 1 GHz
Devices with 1.8 GHz (XP-702-D...)	X86 Pentium M, 1.8 GHz
Internal memory	
DRAM	
Devices with 1 GHz (XP-702-C...)	1024 MByte
Devices with 1.8 GHz (XP-702-D...)	2048 MByte
External memory (optional)	
CF slot	2× CompactFlash Card Type I/II for operating system, programs and data
Hard disc slot	1× 2.5" hard disc for operating system, programs and data
Real-time clock (battery backup)	
Battery type	CR2477 (950 mA/h), maintenance-free
Backup time in de-energized state	Normally 10 years

Tab. 27 System

9.5

Interfaces

Property	XP-702
Ethernet	■ 1 × 100Base-TX / 10Base-T ■ 1 × 1000Base-T / 100Base-TX / 10Base-T
COM	2 × RS232, not electrically isolated
USB Host	4 × USB 2.0 (1.5 / 12 / 480 MBit/s), not electrically isolated
PCI	PCI 32 bit 2.1: Slot for 3.3 V PCI expansion card (e.g.: communication module)
VGA	VGA
DVI (only BOX devices)	DVI-D (Single Link)
Power supply	→ Chapter 9.5.1,  73
DIAG	Only for service tasks

Tab. 28 Interfaces

9.5.1

Power supply

Devices with 1 GHz (XP-702-C...)

Property	XP-702-C...
Rated voltage	24 VDC SELV (safety extra low voltage)
Permissible voltage	<ul style="list-style-type: none"> ■ RMS value: 20.4 ... 28.8 VDC (rated voltage +20 % / -15 %) ■ Absolute with ripple: 19.2 ... 30.0 VDC ■ 35 VDC for a period < 100 ms
Voltage dips	<ul style="list-style-type: none"> ■ 1 ms from rated voltage (24 VDC) ■ 1 ms from undervoltage (20.4 VDC)
Power consumption	
BOX devices	
Basic device	Max. 18 W (normally 15 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 33.5 W
8.4" devices	
Basic device	Max. 33 W (normally 27 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 48.5 W
10.4" devices	
Basic device	Max. 33 W (normally 27 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 48.5 W

9 Technical data
9.5 Interfaces

Property	XP-702-C...
12.1" devices	
Basic device	Max. 35 W (normally 28 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 50.5 W
15" devices	
Basic device	Max. 49 W (normally 40 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 64.5 W
Current consumption	
Continuous current	
BOX devices	Max. 1.4 A (24 VDC)
8.4" devices	Max. 2.0 A (24 VDC)
10.4" devices	Max. 2.0 A (24 VDC)
12.1" devices	Max. 2.1 A (24 VDC)
15" devices	Max. 2.7 A (24 VDC)
Starting current inrush	2 A ² s
Protection against reverse polarity	Yes
Fuse	Yes (replacement only by the manufacturer or by an authorized repair center)
Potential isolation	No

Tab. 29 Power supply, devices with 1 GHz (XP-702-C...)

Devices with 1.8 GHz (XP-702-D...)

Property	XP-702-D...
Rated voltage	24 VDC SELV (safety extra low voltage)
Permissible voltage	<ul style="list-style-type: none"> ■ RMS value: 20.4 ... 28.8 VDC (rated voltage +20 % / -15 %) ■ Absolute with ripple: 19.2 ... 30.0 VDC ■ 35 VDC for a period < 100 ms
Voltage dips	<ul style="list-style-type: none"> ■ 1 ms from rated voltage (24 VDC) ■ 1 ms from undervoltage (20.4 VDC)
Power consumption	
BOX devices	
Basic device	Max. 47 W (normally 37 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 62.5 W
8.4" devices	
Basic device	Max. 59 W (normally 49 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 74.5 W
10.4" devices	
Basic device	Max. 59 W (normally 49 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 74.5 W
12.1" devices	
Basic device	Max. 61 W (normally 50 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 76.5 W

9 Technical data
9.6 Enclosure ratings

Property	XP-702-D...
15" devices	
Basic device	Max. 73 W (normally 62 W)
PCI expansion card	Max. 7 W
USB stations on USB host	Max. 6 W
Hard disk	Max. 2.5 W
Total	Max. 88.5 W
Current consumption	
Continuous current	
BOX devices	Max. 2.6 A (24 VDC)
8.4" devices	Max. 3.1 A (24 VDC)
10.4" devices	Max. 3.1 A (24 VDC)
12.1" devices	Max. 3.2 A (24 VDC)
15" devices	Max. 3.7 A (24 VDC)
Starting current inrush	2 A ² s
Protection against reverse polarity	Yes
Fuse	Yes (replacement only by the manufacturer or by an authorized repair center)
Potential isolation	No

Tab. 30 Power supply, devices with 1.8 GHz (XP-702-D...)

9.6

Enclosure ratings

Property	XP-702
Front, depending on the device version:	
Devices without display (BOX devices)	IP20
Devices with display	IP65: Required accessories for mounting: ■ Additional set of retaining brackets (optional)
Rear	IP20

Tab. 31 Enclosure ratings

9.7

Agency approvals and standards

Property	XP-702
EMC	2004/108/EC
Explosion protection, depending on the device version:	
Devices without display (BOX devices)	II 3D Ex II T70°C IP5x (ATEX 94/9/EC): ■ Zone 22, category 3D
Devices with display	II 3D Ex II T70°C IP5x (ATEX 94/9/EC): ■ Zone 22, category 3D: Required accessories for mounting: - Additional set of retaining brackets (optional)
UL	UL 508 (approval pending): File no. E205091

Tab. 32 Agency approvals and standards

9.8

Applicable standards and regulations

Property	XP-702
EMC (in relation to CE)	
EN 61000-6-2	Immunity for industrial areas
EN 61000-6-4	Emission for industrial environments
EN 61131-2	Programmable logic controllers, equipment requirements and tests
Explosion protection (in relation to CE)	
ATEX 94/9/EC: Zone 22, Category 3D (II 3D Ex II T70°C IP5x):	
EN 60079-0	Electrical apparatus for explosive gas atmospheres
EN 61241-1	Electrical apparatus for use in the presence of combustible dust
EN 13463	Non-electrical equipment for use in explosion hazardous areas
Safety	
EN 60950	Safety of information technology equipment
UL 508	Industrial Control Equipment

9 Technical data
9.9 Ambient conditions

Property	XP-702
Product standards	
EN 50178	Electronic equipment for use in power installations
EN 61131-2	Programmable logic controllers, equipment requirements and tests

Tab. 33 Applicable standards and regulations

9.9

Ambient conditions

Property	XP-702
Temperature	
Operation	
Devices without a hard disk	0 ... 50°C
Devices with consumer hard disk (optional, not suitable for continuous operation)	0 ... 45°C
Devices with industrial hard disk (optional, suitable for continuous operation)	0 ... 50°C
Storage / Transport	-20 ... 60°C
Relative air humidity	10 ... 95%, non-condensing
Vibration	According to IEC68-2-6
Shock	According to IEC68-2-27
Fall test	According to IEC68-2-32

Tab. 34 Ambient conditions