A7PS/A7PH

CSM_A7PS/A7PH_DS_E_6_1

Dust-tight, Easy-to-Use, Push-operated Switches with Large Display Characters

- Simple push mechanism and large, easy-to-view numeric display make setting easy.
- Dust penetration prevented with seal for the display windows.



Ordering Information

Switches (Single Switch Units)

Model	A7	'PS	А7РН						
Classification (See note 1.)									
Character height	Decimal: 6.8 mm Hexadecimal: 4.0 mm								
Terminals		Solder terminals							
Color	Light gray	Black	Light gray	Black					
Output code number	Model								
03 (decimal code)	A7PS-203	A7PS-203-1	A7PH-203	A7PH-203-1					
06 (binary coded decimal)	A7PS-206	A7PS-206-1	A7PH-206	A7PH-206-1					
07 (binary coded decimal, with component-adding provision) *1	A7PS-207	A7PS-207-1	A7PH-207	A7PH-207-1					
19 (decimal code, with component-adding provision)	A7PS-219	A7PS-219-1							
54 (binary coded hexadecimal)	A7PS-254	A7PS-254-1	A7PH-254	A7PH-254-1					
55 (binary coded hexadecimal, with component adding provision) *1	A7PS-255	A7PS-255-1							

- Note: 1. The classification diagrams show 4 Switch Units combined with End Caps to create 4-digit displays.
 - 2. The model numbers given above are for 1 Switch Unit.
 - 3. Models with stoppers are also available. Add "-S after the "203," "206," "207," "219," "254," or "255" in the model number and specify the display range in the $\square\square$. For example, to specify the range 0 to 6, add "-S06" to the model number (e.g., A7PS-206-S06-1). '-SOF" can not be available for type -254, -255.
- 4. Models with +, displays can also be produced. Add "-PM" after the "206" in the model number (e.g., A7PS-206-PM or A7PS-206-PM-1) *1. Models with diodes are available. Add "-D" to the model number (e.g., A7PS-207-D or A7PS-207-D-1).

Accessories (Order Separately)

Use accessories, such as End Caps and Spacers, with the Switch Units.

Accessory	Color	Light gray	Black				
End Caps		A7P-M	A7P-M-1				
Spacer		A7P-P□	A7P-P□-1				
Spacer		(See note.)	(See note.)				
0	Solder terminals	NRT-C					
Connec- tors Solder termina		NRT-CN					
1010	PCB terminals	NRT-CP					

Note: The $\hfill\Box$ in the Spacer model number stands for a letter in the range A to U. (Refer to the table in the following explanation about Spacers.)

End Caps are used on the Switch Units at each end and allow all the Switch Units to be securely mounted to a panel. They come in pairs, one for the left and one for the right.

Spacers

- Spacers are used for creating extra space or gaps between the Switch Units and have the same dimensions as the Switch Units
- There are also Spacers with engraved characters or symbols that can be used for indicating units, such as time and length. (Refer to the following table.) Consult your OMRON representative for details.


Symbol	Α	В	С	D	E	F	G	
Stamp	No designation	SEC	MIN	Н	g	kg	mm	
Symbol	Н	J	K	L	Q	Т	U	

Specifications

Item	Model	A7PS	А7РН						
Switching capacity (resistive load)		50 VAC or 3.3 to 28 VDC 1 mA to 0.1 A	125 VAC or 3.3 to 28 VDC 10 μA to 0.15 A						
Continuous carry current		1 A max.	3 A max.						
Contact resistance		300 mΩ max.	•						
Insulation	Between non-connected terminals	10 MΩ min. (at 500 VDC)	100 MΩ min. (at 500 VDC)						
resistance	Between terminal and non-current carrying part	1,000 MΩ min. (at 500 VDC)							
Dielectric	Between non-connected terminals	600 VAC, 50/60 Hz for 1 min							
strength Between terminal and non-current carrying part		1,000 VAC, 50/60 Hz for 1 min							
Vibration resistance		10 to 55 Hz, 1.5-mm double amplitude for 2 hours min.							
Shock resistance		490 m/s² min.							
Durability	Mechanical	100,000 operations min.	2,000,000 operations min.						
	Electrical	50,000 operations min.	1,000,000 operations min.						
Ambient temperature		Operating: -10°C to 65°C							
Ambient h	umidity	Operating: 45% to 85%							
Max. opera	ating force	6.37 N max.							

Dimensions (Unit: mm)


Switches

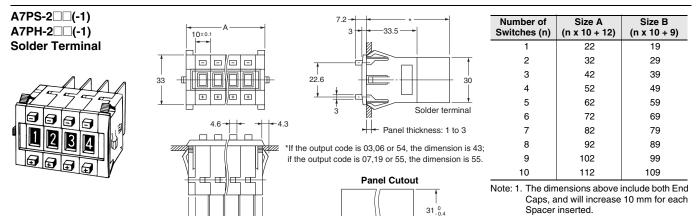

B⁺¹₀


Accessories (Order Separately)

End Caps for Push-operated Switches A7P-M(-1) Snap-in Panel Mounting

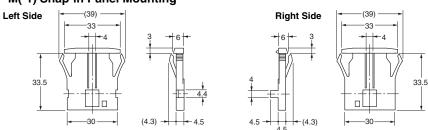

P= 10±0.2

Spacers for Push-operated Switches A7P-P□(-1) Snap-in Panel Mounting

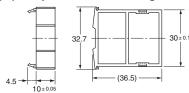

The \square in the Spacer model number stands for a letter in the range A to U. (Refer to the table under the explanation about Spacers on page 1.)

Note: Unless otherwise indicated, dimensional tolerances for dimensions in the models above are $\pm\,0.4$ mm.


Unless otherwise specified, a tolerance of ±0.4 mm applies to all dimensions.
 The tolerance for multiple connection is


±(number of units x 0.4) mm.

Connectors

(These devices allow Switches to be quickly removed for maintenance and inspection of connectivity, and quickly re-installed.)

NRT-C Solder Terminals

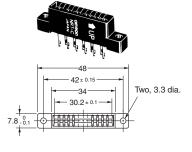

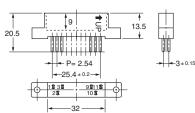

NRT-CN Solder Terminals

NRT-CP PCB Terminals 34 30.2 ± 0.1 25.4 ± 0.2 7.8 17.5 19 13.5 17.5 19 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5 13.5

Note: Unless otherwise indicated, dimensional tolerances for dimensions in the models above are $\pm\,0.4$ mm.

Inserting Connectors

Insert Connectors with the "UP" arrow pointing up.





Connector

Output Codes/Terminals

- Switches with output codes 06 or 07 both use binary coded decimal but Switches with output code 07 have a componentadding provision. Similarly, Switches with output codes 54 or 55 both use binary coded hexadecimal but Switches with output code 55 have a componentadding provision.
- How to Read Output Codes
 For example, when the dial position is
 "3," the common terminal C on the
 Switch is connected to terminals 1 and 2.
 When the Switch is inserted into the
 Connector, the common terminal C
 becomes connector terminal 3, and
 terminals 1 and 2 become connector
 terminals 5 and 7 respectively.

Output code number	Terminals	Output codes												
	9 8 7 P= 2.54	Model	Switch Unit or Connector minal number Terminals connected to common											
03	5 <u>c</u> 30		Switch Unit	С	0	1	2	3	4	5	6	7	8	9
03	Twenty	03,19	Connec- tor	6	1	2	3	4	5	7	8	9	10	11
	-two, 1.1-dia. 2.5 holes) 1	•	•								
			2				•							
	Forty-four, 1-dia. holes		3					•	•					
	⁸ / ₇ P= 2.54 _{12.7}	Dial		5						•				
19	30			3							•			
				7 3								•		
	8.5 3 2.5			9										•
	Component-adding provision	Note: The									vitch	is (NC	
		(i.e	., connec	ted to th	e cc	mm	on 1	erm	inal).				
	8 4 P= 5.08	Model	Switch Unit or Connector	Common ter- minal number		Terminals con- nected to common								
06	30		Switch Unit	С	1	2	4	8	•					
00	V6	06	Connec- tor	3	_	_	9							
	Ten, 1.1-dia. 2.5 holes	07	Connec- tor	1	5	5 7		11						
	110100													
	*****		1 2		•	•			Note: The solid dot					
	4 P= 5.08			3		•								
		Dial	4		•		•		the internal switch is ON					
07	Twenty - * * * c			5 6		•	•			(i.e., connector the community terminal).				
	-three, 8.5 3 1 1.1-dia. 4.5		7		•	•	•							
	holes 4.5 Component-adding provision		1	3				•						
	Component adding provision		,	9	•			•						